

Le Roy


PRICE LIST

January 2, 1939

Prices and Terms Subject to Change Without Notice

LE ROY and CAMBRIDGE

Walking Plows and All Repairs

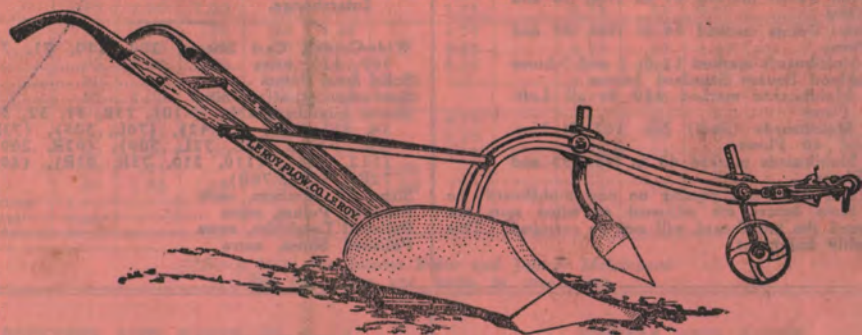

Manufactured by

LE ROY PLOW COMPANY

LE ROY, N. Y., U. S. A.

(For Index See Outside of Back Cover)

List Prices on Le Roy Walking Plows

Number	Beams	Moldboard	With Clevis Only	With Wheel and Clevis	Full Rugged With Jointer	Number	Beams	Moldboard	With Clevis Only	With Wheel and Clevis	Full Rugged With Jointer
2 1/2	Cast	Chill	13.65	15.05	18.95	109	Steel	Chill	18.70	20.10	24.00
6 1/2	Wood	"	12.05	13.45	16.45	109	"	Steel	20.10	21.50	25.40
8	"	"	13.05	14.45	17.45	110	"	Chill	20.85	22.25	26.15
21	Cast	"	16.90	18.30	22.20	110	"	Steel	22.25	23.65	27.55
22	"	"	18.75	20.15	24.05	112	"	Chill	22.60	24.00	27.90
*30	Steel	Sol. Steel			31.90	114	"	"	23.20	24.60	28.50
*31	"	"		26.95		210	"	SC. Steel	22.25	23.65	27.55
32	"	"		26.10		508	"	Chill	17.25	18.65	22.55
107	"	Chill	13.85	15.25	19.15	509	"	"	18.70	20.10	24.00
108	"	"	17.25	18.65	22.55	510	"	Chill	20.85	22.25	26.15
108	"	Steel	18.65	20.05	23.95						
Plow regularly equipped with Jointer, but ordered with Colter, deduct, per plow, 50c.											
(*Prices include Shifting Clevis).											

For prices on Sulky Plows see Net Wholesale Price Sheet.

EXPLANATION

Jointer Points marked 110 fit all 2 and 3-horse Right-Hand Square Standard Jointer
 All Jointer Points marked 138 fit all Left-hand Plows
 All Jointer Points marked 69 fit Nos. 30 and 40 Plows
 All Jointer Points marked 44 fit Nos. 35 and 37 Plows
 Jointer Moldboards marked 13 fit 2 and 3-horse Right-Hand Square Standard Jointer
 Jointer Moldboards marked 139 fit all Left-hand Plows
 Jointer Moldboards (steel) No. 167 fit Nos. 30 and 40 Plows
 Jointer Moldboards marked 43 fit Nos. 35 and 37 Plows
IMPORTANT—When putting on new moldboards be sure cross braces are adjusted so when nuts are tightened the moldboard will not be cramped. This is highly important.

NOTE—Shoes are alike for 33, 34 and 35 Plows. Shoes are alike for 30, 31, 32, 40, 41 and 42 Plows.
 No. 52 Saddle fits 33, 34 and 35 Plows.
 No. 45 Saddle fits 37 Plows.
 No. 173 Saddle fits 30, 31 and 32 Plows.
 No. 530 Saddle fits 40, 41 and 42 Plows.
 No. 108, 50, 70R Standards Interchange.
 No. 109, 72R Standards Interchange.
 No. 110, 52, 71R, 73R and 93R Standards Interchange.
 No. 508, 70L, Standards Interchange.
 No. 509, 71L, 72L, 73L, 93L and 510 Standards Interchange.

Wide-Cutting Cast Shares, 109, 110, 71, 73, 509, 510, extra 20
 Solid Steel Points 4 00
 Steel-edge Alfalfa Points 3 00
 Shares interchangeable (9-10), (30, 31, 32, 33, 34, 35), (40, 41, 42), (70L, 508), (73L, 93L, 510), (71L, 72L, 509), (92R, 209), (112, 114), (110, 210, 73R, 93R), (109, 72R), (108, 70R).
 Slips, all numbers, each 15
 Polished Points, extra 20
 Polished Landsides, extra 25
 Polished Shoes, extra 20

JOINTERS AND PARTS

Jointers complete for all 1-horse wood beam flat land plows \$ 3 50
 Jointers complete for No. 107 1-horse, also all 2 and 3-horse flat land plows (No. 2 1/2 excepted) 4 50
 Jointers complete for all 2-horse steel beam hillside plows 5 25
 Jointers complete for all Le Roy sulky plows 4 50
 Jointers, complete, less Attachments, for 2 and 3-horse plows, also for No. 107 1-horse 3 50
 7 Upper Jointer Standard with Bolts, 7 and 8 Plows 1 95
 4 Upper Jointer Standard, fits 4 and 6 Plows 2 20
 21 Upper Jointer Standard with Bolts, fits 9, 10, 12, 14 Plows 2 65
 16 Lower Jointer Standard, complete, fits 9, 10, 12, 14, 21 and 22 Plows 3 10
 16 Lower Jointer Standard only, fits 9, 10, 12, 14, 21 and 22 Plows 2 00
 36 Lower Jointer Standard, complete, fits 7 and 8 Plows (before 1923) 3 00
 36 Lower Jointer Standard only, fits 7 and 8 Plows (before 1923) 2 00

202 Jointer Support for 21 and 22 Plows 2 00
 78 Jointer Standard Guide Washer, 4 and 6 Plows 65
 533 Lower Jointer Section complete for 108, 109, 110, 112 and 114 Plows 2 40
 533 Lower Jointer Section R. H., new style... 1 30
 534 Lower Jointer Section L. H., new style... 1 30
 535 Jointer Standard for No. 107 Plows 1 40
 536 Lower Jointer Section for Nos. 6, 6 1/2, 7 and 8 Plows 1 00
 537 Jointer Point and Moldboard for Nos. 6 1/2, 7, 8 and 107 Plows after 1923... 60
 538 Upper Jointer Section for Nos. 6 and 6 1/2 Plows after 1923 1 65
 540 Upper Jointer Section for Nos. 7 and 8 Plows after 1923 1 75
 541 Jointer Foot for No. 107 Plows 1 65
 542 Jointer Eye Bolt Washer for No. 107 Plows 25
 77 Lower Section, complete, for 4 and 6 Plows 2 40
 77 Lower Section only, for 4 and 6 Plows... 1 30
 534 Lower Jointer Section, complete, for 509 and 510 Plows 2 40
 140 Jointer Standard Bracket, 509 and 510 Plows 80
 29 Pipe Socket for Jointer, 35 and 37 Plows 95

Number	SHARES				Land-sides	Shoes	MOLDBOARDS			Shin	Standard	Frogs or Saddles	Beams	Jointer Moldboards
	Plain Pitch Stony	Colter	Slip	Jointer			Chill	Solid Steel	S. C. Steel					
AL3	.85	1.00			1.80	1.00			8.25		4.75		5.50	
2½	.85	1.00			1.00		5.50							
4	.90	1.05		.30	1.50		6.25					2.00		.55
6½	.70	.85		*.60	1.10		4.00				2.75		4.00	
7	.70	.85		*.60	1.20		4.00				4.00		4.25	.55
8	.70	.85		*.60	1.20		4.50				4.00		4.25	.55
9	.90	1.05	1.05	.30	1.50		5.25		8.25	.95	4.75		4.50	.55
10	.90	1.05	1.05	.30	1.50		5.75		8.75	.95	4.75		4.50	.55
12	.95	1.10	1.10	.30	1.75		6.25		9.25	.95	5.00		4.75	.55
14	.95	1.10	1.10	.30	1.75		6.75		9.75	.95	5.00		4.75	.55
21	.85	1.00	1.00	.30	1.60		6.25		9.25	.95			7.75	.55
22	.90	1.05	1.05	.30	1.60		6.75		9.75	1.05			8.25	.55
30	.95			.40		1.45		7.25	8.50		4.25	2.75	7.50	.70
31	.95					1.45		7.25	8.50		4.25	2.75	7.50	
32	.95					1.45		7.25	8.50		4.25	2.75	7.50	
33	.95					1.45	5.50		8.50			2.75	8.25	
34	.95					1.45	5.50		8.50			2.75	8.25	
35	.95			.40		1.45	5.50		8.50			2.75	9.00	.55
37	.95			.40		1.45	5.50		8.50			2.75	10.50	.55
40	.95			.40		1.45		7.00	8.25		4.25	2.75	7.50	.70
41	.95					1.45		7.00	8.25		4.25	2.75	7.50	
42	.95					1.45		7.00	8.25		4.25	2.75	7.50	
107	.70			*.60	.80	.70	4.00			.75	3.00		6.50	.55
108	.75	.90	.90	.30	1.40		4.75		7.75	.85	3.50		7.50	.55
109	.80	.95	.95	.30	1.50		5.25		8.25	.85	3.75		7.50	.55
110	.85	1.00	1.00	.30	1.60		5.75		8.75	.95	4.00		7.50	.55
112	.90	1.05	1.05	.30	1.75		6.25		9.25	.95	4.25		7.50	.55
114	.90	1.05	1.05	.30	1.75		6.75		9.25	.95	4.25		7.50	.55
209	.80	.95		.30	2.50	1.00			8.25		3.75		7.50	.55
210	.85	1.00	1.00	.30	2.50	1.00			8.75	1.05	3.75		7.50	.55
508	.75	.90	.90	.30	1.40		4.75		7.75	.85	3.50		7.50	.55
509	.80	.95	.95	.30	1.50		5.25		8.25	.85	4.00		7.50	.55
510	.85	1.00	1.00	.30	1.60		5.75		8.75	.95	4.00		7.50	.55
70R	.75	.90	.90	.30	1.40		4.75		7.75	.85	3.50		8.50	.55
71R	.80	.95	.95	.30	1.50		5.25		8.25	.85	4.00		8.50	.55
73R	.85	1.00	1.00	.30	1.60		5.75		8.75	.95	4.00		8.50	.55
92R	.80	.95		.30	2.50	1.00			8.25		4.00		8.50	.55
93R	.85	1.00	1.00	.30	2.50	1.00			8.75	.95	4.00		8.50	.55
70L	.75	.90	.90	.30	1.40		4.75		7.75	.85	3.50		8.50	.55
71L	.80	.95	.95	.30	1.50		5.25		8.25	.85	4.00		8.50	.55
73L	.85	1.00	1.00	.30	1.60		5.75		8.75	.95	4.00		8.50	.55
92L	.80	.95		.30	2.50	1.00			8.25		4.00		8.50	.55
93L	.85	1.00	1.00	.30	2.50	1.00			8.75	.95	4.00		8.50	.55
80 tractor Steel	1.25 4.00			1.00	2.00				8.25		5.00		8.50	

*Since 1923 the Jointer Point and Jointer Moldboard for this plow are made in one piece.

JOINTERS AND PARTS—Continued

30	Lower Jointer Section, 35 and 37 Plows..	1 20
119	Jointer Standard Beam Washer	25
120	Jointer Standard Bracket, 108, 109, 110, 112 and 114 Plows	80
121	Jointer Standard Eyebolt and Nut, 108, 109, 110, 112, 114, 210, 509, 510	80
180	Main Jointer Standard (steel), 108, 109, 110, 112, and R. H. Sulky Plow Bases	1 95
178	Jointer Standard (steel), 35 and 37 Plows	1 80
179	Jointer Standard, 30, 31, 40 41 Plows ..	1 80
187	Main Jointer Standard (steel), 508, 509, 510 and L. H. Sulky Plow Bases	1 95
152	Rear Spring Guide, 30 and 40 Plows	55
162	L. Jointer Bracket, 30 and 40 Plows	2 00
163	R. Jointer Bracket, 30 and 40 Plows	2 00
164	Jointer Spring Guide, 30 and 40 Plows ..	65
165	Jointer Shift Casting, 30 and 40 Plows ..	65
167	Jointer Moldboard, 30 and 40 Plows	70
176	Jointer Socket, 30 and 40 Plows	80
69	Jointer Point for 30 and 40 Plows	40
41	Jointer Point, 7 and 8 Plows (before 1923)	40
42	Jointer Moldboard, 7 and 8 Plows	55
43	Jointer Moldboard, 35 and 37 Plows	55
44	Jointer Point for 35 and 37 Plows	40

WHEELS AND PARTS

	Wheel and Standard with attachments, complete, 1-horse and 2-horse (No. 2½ excepted)	1 65
	Wheel and Axle complete	1 10
	Wheel and Standard, complete, less attachments, 2 or 3-horse	1 45
1	Wheel Standard Eyebolt, 9, 14, 21, 22, 30, 32, 108, 109, 110, 508, 509, 510 Plows—R. and L.	55
12	Back Wheel Washer on Standard	25
17	Washer on Eyebolt, Wood Beam Plows ..	25
18	Wheel, 7 in. diameter	80
27	Wheel, 6½ in. diameter	80
34	Wheel Axles, 7, 8 Plows	30
35	Wheel Washer	20
X	Wheel Standard Eyebolt, 7, 8 Plows	55
61	Wheel Axles	30
66	Wheel Standard Bracket, 6½ Plow	40
72-73	Washer for 4 and 6 Plows	20
74	Wheel, 7 in. diameter, 4, 6 Plows	80
181	Wheel Square Standard, (steel), all Le Roy Plows	1 00
76	Wheel Standard, complete, 4 and 6 Plows ..	1 55
113	Wheel Standard for 2½ Plow	1 00
126	Wheel Standard Bracket, 108, 109, 110 and 112 Plows	55
134	Wheel Standard Bracket, 114 Plow	55

WHEELS AND PARTS—Continued

141	Wheel Standard Bracket, 508, 509, 510 Plows	55
507	Wheel Standard Bracket, 50, 51, 52, Plows	55
508	Wheel Standard Plate, 6½, 50, 51, 52, Plows	50
509	Wheel Axle, 6½, 50, 51, 52 Plows	40
510	Wheel Standard, 6½, 50, 51, 52 Plows..	1 10

HANDLES

	Single	Pairs
One-horse fitted	\$ 95	2 30
Two and three-horse, fitted	1 20	2 80
Handle Rods, each	25	
Handle Rounds, each	25	
Handle in rough, one-horse	75	
Handle in rough, two-horse	95	
Handle Brace, each	45	

HANDLE ATTACHMENTS AND MOLD-BOARD BRACES

8	Moldboard Spreader, 7, 8 Plows	\$ 85
9	Shift Piece for Handles, 7, 8 Plows	45
10	Handle Brace, 7, 8 Plows	1 00
11	Handle Brace Washer, 7, 8 Plows	25
20	Beam Rest for Handles, 9, 10 Plows	1 50
26	Handle Support for 33, 34, 35, 37 Plows	1 50
31	Clevis Rod Rest on Handles 30, 31, 33, 35, 37 Plows	25
32	Beam Rest for Handles, 12, 14 Plows ..	1 45
59	Main Moldboard Brace, 6½ Plows	55
60	Upper Moldboard Brace, 6½ Plows	45
65	Upper Handle Brace, 6½ Plow	85
68	Lower Handle Brace, 6½ Plow	45
	Left Handle Support for 2½ Plow	55
116	Main Handle Support and Moldboard Brace, 110, 112, 114 Plows	1 65
131	Main Handle Support and Moldboard Brace, 108, 109 Plows	1 50
148	Main Handle Support and Moldboard Brace 209, 210 Plows	1 65
200	Main Handle Support and Moldboard Brace, 21, 22 Plows	1 50
201	Upper Right Moldboard Lug, 21, 22 Plows	55
203X	Lower Left Handle Support, 21 and 22 Plows	85
204X	Lower Right Handle Support and Moldboard Brace, 21, 22 Plows	55
205	Handle Support to Beam, 21, 22 Plows ..	55
45	Saddle for 37 Plow	2 75
46	Moldboard Y-Brace, 30, 31, 32, 37 Plows	1 65
531	Moldboard Y-Brace, 40, 41, 42 Plows ..	1 10
48	Hook Brace and Nut, 33, 34, 35, 37 Plows	65
52	Saddle for 33, 34, 35 Plows	2 75
53	Moldboard Y-Brace, 33, 34, 35 Plows ..	1 45
47	Washer for Handle Rest, 33, 34, 35, 37 Plows	20
	Moldboard Fillers, each	40
	Double Eyebolts with Nuts, each	50
	3-inch Rings	30
	Staples, each	05
81	Right Handle Brace to Beam, 4, 6 Plows	90
82	Left Handle Brace to Beam, 4, 6 Plows..	90
83	Right Handle Support for Cast Moldboard, 4, 6 Plows	1 65
84	Left Handle Support to Standard, 4 Premier	1 65
85	Right-hand Support for Steel Moldboard, 4, 6 Plows	1 65
88	Handle Brace Washer, 4, 6 Plows	20
117	Lower Right Handle Support and Moldboard Brace, 110, 112, 114 Plows	45
118	Lower Left Handle Support and Moldboard Brace, 110, 112, 114 Plows	65
127	Upper Right-hand Moldboard Lug, 108, 109, 110, 112, 114 Plows	45
132	Lower Right Handle Support and Moldboard Brace, 108, 109 Plows	55
133	Lower Left Handle Support and Moldboard Brace, 108, 109 Plows	65
142	Main Handle Rest and Moldboard Brace, 509, 510 Plows	1 50
143	Lower Right-hand Handle Support and Moldboard Brace, 509, 510 Plows	45
144	Lower Left-hand Handle Support and Moldboard Brace, 509, 510 Plows	55
145	Upper Left Handle Support and Moldboard Lug, 509, 510 Plows	55

160	Main Standard and Handle Support, 30, 31 and 32 Plows	4 25
296	Main Handle Support and Moldboard Brace, 209 Plow	1 50
302	Right Moldboard Lug, 209 Plow	45
303	Lower Handle Support and Moldboard Brace, 209 Plow	65
375	Main Handle Support and Moldboard Brace, 508 Plow	1 50
376	R. H. Lower Handle Support and Moldboard Brace, 508 Plow	65
377	L. H. Lower Handle Support and Moldboard Brace, 508 Plow	60
519	Lower Handle Support to Beam, 107 Plow	85
524	Handle Support, 107 Plow	1 10
525	Swivel Handle Support to Beam, 107 Plow	85
529	Lower Handle Swivel Bracket	45

MISCELLANEOUS

24	L. H. Moldboard Catch, 33, 34, 35 and 37 Plows	\$ 40
25	R. H. Moldboard Catch, 33, 34, 35 and 37 Plows	\$ 40
47	Washer for Guide Plate N	30
49	Moldboard Lock, 37 Plow	1 00
51	Guide Loop for 33, 34 Plows, spring ..	45
54	Moldboard Lock, 33, 34, 35 Plows	90
Y	Guide Loop for 35, 37 Plows Spring ..	35
N	Guide Washer for Spring, 33, 34, 35 and 37 Plows	30
184	Reverse Spring, 33, 34, 35, 37 Plows ..	1 55
R	Right Nut for Clevis Rod Screw	35
L	Left Nut for Clevis Rod Screw	35
87	Beam Washer, 4 Plow	25
128	Beam Washer, 108, 109, 110, 112, 114 Plows	25
S	Beam Washer for Handle Braces	25
P	Wheel Standard Eyebolt Washer	20
D	Eyebolt Washer, 33, 35, 37 Plows	25
37	Plow Wrench	35
37X	Plow Wrench	35
147	Landside Filler, 210 Plows	65
154	R. H. Catch, 30, 31, 32, 40, 41, 42 Plows	45
155	L. H. Catch, 30, 31, 32, 40, 41, 42 Plows	45
156	M. B. Lock, 30, 31, 32, 40, 41, 42 Plows	90
157	Catch Support, 30, 31, 32, 40, 41, 42 Plows	1 05
158	Catch Spring Cap, 30, 31, 32, 40, 41, 42 Plows	20
159	Latch Spring, 30, 31, 32, 40, 41, 42 Plows	45
161	Shift Spring, 30, 40 Plows	1 00
168	Beam Cap, 30, 31, 40, 41 Plows	95
169	Beam Cap, 32, 42 Plows	90
173	Saddle for 30, 31, 32 Plows	2 75
175	Inner Shoe and Rivets, 30, 31, 32, 40, 41 42 Plows	2 50

PARTS FOR ROLLING COLTER

316	Box (2 pieces) each	\$ 25
317	Bearing (2 pieces) each	30
318	Hub	65
319	Castor	1 40
320	Steel Standard	2 10
321	Beam Bracket	90
322	Beam Bracket Plate	45
322	Wedge Washer	30
323	Rolling Colter Bracket	1 00
315	Right Rolling Colter Bracket	1 00
	13-inch Rolling Colter Blade and Hub ..	2 75
	13 inch Rolling Colter, complete with attachments	7 00

COLTERS AND PARTS

	Colter complete for 30 series steel beam side hill plows	5 00
	Colters, complete, for all 2-horse flat land Plows and sulkies, also No. 107 (2½ excepted)	4 25
	Colters, less attachments, for 1 and 2-horse plows and sulkies (2½ excepted)	2 50
	Colter blade only for No. 30	2 00
28	Dog for 35 and 37 Plows	45
119	Colter Beam Washer	25
120	Colter Bracket, 108, 109, 110, 112, 114 Plows	80
121	Eyebolt and Nut, 108, 109, 110, 112, 114, 210, 509, 510 Plows and Sulky....	80

COLTERS AND PARTS—Continued

326	Under Washer for Coil Spring Colter attachment, 30, 40 Plows	30
327	Upper Washer for Coil Spring attachment, 30, 40 Plows	30
328	Right Bracket Colter Attachment, 30, 40 Plows	80
329	Left Bracket Colter Attachment, 30, 40 Plows	80
330	Shift Wedge Colter Attachment, 30, 40 Plows	40
331	Front Shift Arm Colter Attachment, 30, 40 Plows	45
332	Rear Shift Arm Colter Attachment, 30, 40 Plows	55

CLEVISES AND PARTS

0	Small Front Clevis with Pin, 7, 8 Plows	30
2	Small Front Clevis with Pin, all Steel Beam Plows	30
3	Head Cross Clevis, complete with Pin, 7, 8 Plows	85
	Cross Clevis Pin	20
4	Right-hand Clevis Jaw, 7, 8 Plows	50
5	Left-hand Clevis Jaw, 7, 8 Plows	1 10
5X	Left-hand Clevis, less Bracket	50
14	Head Cross Clevis, complete with Pin, 9, 10, 12, 14 Plows (no shackles)	1 00
15	R. H. Clevis Jaw, 9, 10, 12, 14 Plows	65
19	L. H. Clevis Jaw, 9, 10, 12, 14 Plows	1 20
22	Bearing for Clevis Rod, 35, 37 Plows	35
23	Clip Bolt for Clevis Rod, 35, 37 Plows	30
H	Coupling Joint for Clevis Rod, 33, 35, 37 Plows	40
33	Front Socket Rest Clevis Rod, 33, 35, 37 Plows	65
38	Clevis Hook, 30, 31, 32, 33, 34, 35, 37, 40, 41, 42 Plows	70
39	Head Clevis, 30, 31, 33, 35, 37 Plows	1 00
50	Head Clevis, 32, 34 Plows	90
62	Right Clevis Jaw, 6½ Plow	45
63	Left Clevis Jaw, 6½ Plow	45
75	Head Clevis, 4, 6, Steel Beam Plows	1 20
206	R. H. Clevis Side, 21, 22 Plows	45
207	L. H. Clevis Side, 21, 22 Plows	70
208	Head Cross Clevis, 21, 22 Plows	95
40	Clevis Rod Screw, 30, 31, 33, 35, 37 Plows	90
211	3-Horse Clevis for 21, 22 Plows, complete with Rod	2 20
	Shifting Clevis and all parts to change No. 32 to No. 31	5 00
	Clevis Pins	10
	Clevis Rings	15
	Clevis Adjusting Rod, handle section steel, 33, 35, 37 Plows	1 10
112	Main Clevis, 2½ Plow	75
123	Beam Cap, 108, 109, 110, 112, 114, 509, 510, 209, 210 Plows	75
124	Main Clevis with Bolt, 5-hole, 108, 508 Plows	95
125	Main Clevis with Bolt, 10-hole, 110, 112, 210 Plows	1 40
129	Main Clevis with Bolt, 7-hole, 109, 114, 209, 509 Plows	1 20
150	Main Clevis with Bolt, 10-hole, 510 Plows	1 40
170	Clip Bolt and Nut for Clevis Rod, 30, 31, 40, 41 Plows	25
171	Beam Section Clevis Rod, 30, 31, 40, 41 Plows	1 20
172	Handle Section Clevis Rod, 30, 31, 40, 41 Plows	1 20
177	Clip Bearing for Shifting Rod, 30, 31, 40, 41 Plows	25
513	Main Clevis with Bolt, 9-hole, for 107 Plows	1 20
514	Chain and Clevis, complete for Vineyard Plows	2 50

EXTRAS FOR LE ROY SULKY PLOWS

	Steel Cap for left wheel	65
	Steel Cap for right wheel	65
	L. P. 5 R. Cast Cap for left wheel	85
	L. P. 5 L. Cast Cap for right wheel	85
N65 or 5779	Cast Cap for 1921 wheel	85
215	Pole Bracket to Frame	1 20
220X	Pole Shift Plate on Yoke, rigid seat	65
224	Pole Shift Coil Spring	15
227	Steel Frame, 2x½	7 50
228	Steel Frame Cross Brace, ¾-round	1 10

229½	V-Bracket and Bolt (229½ with 358 takes place of old 229)	35
230	Clevis, 3-hole	1 00
231	Swivel Clevis Part	55
232	Steel Eyebolt Swivel Clevis	55
233	Draw Rod	55
234	Steel Twisted Link	45
235	Draw Rod End	20
237	Steel Seat Spring	1 65
X238	R. H. Main Lever, complete	6 50
X238	R. H. Main Lever only	5 00
239	R. H. Lever, upper latch	55
240	R. H. Lever, lower latch	55
242	R. H. Guide on Circle	40
243	Steel Coil Spring, main lever	35
244X	R. H. Lever Circle	1 85
245	Right and Left-hand Lever Circle Washer	80
246	Right Jointer Bracket	90
247	Right or Left Axle Clamp, upper	45
248	Right or Left Axle Clamp, lower	45
249	Upper Right and Left Beam Bracket	1 65
250	Lower Right and Left Beam Bracket	1 00
251	Axle Box	55
252	Pole Plate for Bracket 215	80
X253	Left-hand Main Lever complete	6 50
X253	Left-hand Main Lever only	5 00
254	Left-hand Lever, upper latch	55
255	Left-hand Lever, lower latch	55
257	Left-hand Guide on Circle	40
258X	Left-hand Lever Circle	1 85
259	Left-hand Jointer Bracket	90
260	Steel Right Main Axle	4 50
261	Steel Left Main Axle	4 50
262	Wheel Washer	20
	V-Brace to Cross Brace and Bolts	45
263	Right Wheel Ratchet	1 00
264	Left Wheel Ratchet	1 00
265	Left Arm to Axle	1 40
266	Left Arm to Axle Cap	65
276	Right Arm to Axle	1 40
280	Steel Pin, Lever and Axle Bracket	90
281	Axle Bearing Washer on Beam	25
282	Jointer Bearing Washer on Beam	25
283	Lower Lever Latch Washer Bearing	25
287	Lever and Seat Rest Washer	25
304	Singletree End Loop	35
305	Clevis and Ring (large)	45
306	Clevis and Ring (small)	45
307	Clevis, medium for hitch	40
309	Links for Equalizer	40
310	Foot Rest	80
311	Singletree Hooks (right)	40
312	Singletree Hooks (left)	40
313	Large Everen Clevis	45
314	Large Everen Clevis Pin	10
321	Standard Beam Bracket, R. and L. for all Sulkies	90
333	Center Bearing for Foot Trip Shaft	50
334	Foot Trip Castings	55
335	Foot Trip Cam (new No. 361)	55
336	Foot Trip Lever (new No. 362)	50
337	Foot Trip Shaft, right (steel)	80
338	Foot Trip Shaft, left (steel)	80
339	Foot Trip Connecting arm to Cam Lever (steel)	55
341	Pole End Shifter Sector	90
342	Pole Shift Front Sector	1 10
343	Pole Shift Lever, complete	2 20
344	Pole Shift Lever Latch	35
345	Pole Shift Lever Plunger	35
346	Pole Shift Lever to End Sector (steel)	35
347	Pole End Plate	1 10
348	Seat Spring Tilt Lever, complete	2 20
349	Seat Spring Tilt Catch	45
350	Seat Spring Tilt Base and Sector	2 40
351	Main Lever Plunger (right)	1 55
352	Main Lever Plunger (left)	1 55
353	Main Wheel Axle Washer Key	05
354	Left Yoke Bracket	2 75
355	Right Yoke Bracket	2 75
356	Center Axle Bearing on Yoke	2 75
357	Foot Trip Shaft to Cam	65
358	Steel Center Brace	1 65
359	Seat Base for Stationary Seat	55
361	Foot Trip Cam	55
362	Foot Trip Lever	55
363	Pole Shift Plate on Yoke (order 384 and 385)	55
364	Pole Spreader and Tool Box	1 85
	Main Steel Wheel each (no ratchet)	7 50
	2-Horse Hitch, complete	5 50

SULKY PLOW EXTRAS—Continued

366	3-Horse Hitch, complete	6 75
	Center Bearing Foot Trip Shaft	35
	Whiffletrees, each	1 10
	Evener Bar (long)	1 85
	Equalizer Bar	1 20
	Sulky Pole	4 50
	Sulky Seat	1 50
	Sulky Neckyoke	1 75
	Stub Pole	1 65
369	Right Landside Filler, 93 Sulky	65
370	Left Landside Filler, 93 Sulky	65
371	Right Lower M. B. Lug, all right Sulky Pole Bases	45
372	Lower M. B. Brace, all right Sulky Plow Bases	45
373	Left Lower M. B. Lug, all left Sulky Pole Bases	45
374	Lower M. B. Brace, all left Sulky Plow Bases	45
378	Moldboard and Landside Brace, all right hand Sulky Plow Bases	95
379	Upper M. B. Lug, all right hand Sulky Pole Bases	45
380	Moldboard and Landside Brace, all left hand Sulky Plow Bases	95
381	Upper M. B. Lug, all left hand Sulky Pole Bases	45
382	Small Clevis	65
383	5-hole Clevis	1 40
384	Pole End Shift Cam	90
385	Pole End Shift Plate	1 20
389	Twisted Clevis	30
391	Stationary Seat Spring for single or re- versible Sulky Plows	2 20
392	Right Weed Hook, complete	2 20
393	Left Weed Hook, complete	2 20
394	Weed Hook Clamp, right or left	85
395	Weed Hook U-Bolt, right or left	40
396R	Removable Box and Cap (1917 Sulky Wheel)	3 00
396L	Removable Box and Cap (1917 Sulky Wheel)	3 00
396P	Removable Box and Cap (1921 Sulky Wheel)	3 00
445	Bail Block on axle from 1925	1 90
446	Beam Bracket from 1925 (steel)	1 25
447	Bail Block Clamp from 1925	40
448	Seat Tilt Sector from 1926	1 10
449	Clip to 448 from 1926	30
450	Paul to 448 from 1926	50
No. 20 LE ROY IRON BEAM SHOVEL PLOW		
28-S	Iron Beam	5 00
23-S	Point	1 25
24-S	Frog	2 20
25-S	Shoe	1 30
18-S	Draw Hook	50
26-S	Handle Filler	35
27-S	Wings	1 00
	R. H. Handle	95
	L. H. Handle	95
	Wood round	25
No. 10 SHOVEL PLOW PARTS		
1-D	Thumb Nut	10
1-S	Iron Standard	3 50
2-S	Handle Rest	1 25
3-S	Left Wheel Standard	1 10
4-S	Right Wheel Standard	1 10
8-S	Wing Spreader Hook	20
13-C	Wheel	90
15-C	Hitch Hook with Link	45
	Wood Beam	4 25
10	Wings, right and left each	1 55
16-S	Wing Spreader, pairs	90
	Hinges, per pair	35
17-S	Center Brace	65
	Bottom, complete, less standard	8 25
	Handles, each	95
	Handles, pairs	2 30
	Points, each	1 10
	Front Piece	2 00
No. 28 WOOD STANDARD SHOVEL PLOW		
5-T	Clevis Pin	15
6-T	Clevis	55
8-S	Hook	20
16-S	Spreader (pairs)	90
35-S	Point and Front	2 00
36-S	R. H. Wing	1 10
37-S	L. H. Wing	1 10
38-S	Brace	65
	Bottom complete	6 35

39-S	Standard	1 35
40-S	Beam	1 65
41-S	R. H. Handle	95
42-S	L. H. Handle	95
43-S	Handle round	25
44-S	Hinges (pair)	35
	Wheel and Standard complete, same as 16A-16B Plow	1 85
	R. and L. Wheel Block (each)	40

No. 5 AND 6 HILLER PARTS

	No. 5	No. 6
Draw Rod or Pole Braces, Right and Left, each	65	65
5-H Draw Iron	65	65
12-H Right-hand Standard	2 25	2 25
13-H Left-hand Standard	2 25	2 25
38-H Adjusting Clamp, R. or L.	1 00	1 00
19-H Handle Bracket	1 35	1 35
20-H Pole Washer	20	20
21-H Handle Bracket Washer	20	20
22-H Right Pole Bracket	1 40	1 40
23-H Left Pole Bracket	1 40	1 40
24-H Shift Dog	35	35
	L. H. Moldboard	2 50
	R. H. Moldboard	2 50
	Cast Points, each	75
	Pole	4 00
	Frame Top	1 50
	Handles, each	95
	Handles, per pair	2 30
31-H 20-inch Disc, R. or L., each	2 75	2 75
32-H Main Standard	2 50	2 50
33-H Axle	80	80
34-H Disc Washer	25	25
35-H Axle Washer	25	25
36-H Moldboard Axle, R.	95	95
37-H Moldboard Axle, L.	95	95
	Axle Bolt	15

No. 1 AND 4 HILLER PARTS

Following parts will fit Cambridge Disc and Long Wing Hiller:		
	No. 1	No. 4
31-H Disc (each)	2 75	2 75
32-H Standard (each)	2 50	2 50
33-H Axles	80	80
34-H Washers	25	25
35-H Washers	25	25
45-H R. Standard	2 25	2 25
46-H L. Standard	2 25	2 25
47-H Handle Clip	45	45
48-H Draw Iron	45	45
49-H Thumb Nut or Wrench	25	25
50-H Evener Hooks	30	30
	Wings (each) cpt. with bolts	2 25
	Flat Pole Braces (each)	50
	Round Pole Braces (each)	55
	Handle Support	1 10
	Hammer Strap	40
	Pole	4 00
	Frame Top	1 50
	Evener	1 40
	Handles complete	2 30
	Handles (each)	95
	Handle round	25
	Axle or Bushing Bolt	15
	Wood Clips (each)	20

No. 3 MARKER PARTS

1-M	Right Handle Bracket	80
2-M	Left Handle Bracket	90
3-M	Upper Shank Standard	1 10
4-M	Lower Shank Standard	1 20
5-M	Center Top Clamp	90
6-M	End Top Clamp	90
7-M	Marker Plate	1 00
8-M	Spool	50
	Beam	4 00
	Thills, each	2 20
	Handles, each	85
	Handles, pairs	85
	Guide Stick prior to 1923	2 20
	Guide Stick, 1923 style	1 10
	Guide Stick Brace, 1923 style	55
	Marker Point and Bolt, 10-inch	1 00
15-C	Hitch Hook and Link	45
9-M	Upper Thill Brace	55
10-M	Lower Thill Brace	45
11-M	Draw Loop	35
12-M	Clamp for Marker	20
13-M	Marker for Guide Stick, 1923 style	1 00

No. 3 MARKER PARTS—Continued

14-M	End Tooth Clamp and Guide Stick Holder, 1923 style	90
15-M	Center Tooth Top Clamp, 1923 style..	65
	Marker for Guide Stick prior 1923	1 40

No. 24 LE ROY 2-HORSE 3-ROW MARKER

31-M	Hammer Strap	\$ 40
33-M	Marker Iron	50
34-M	Marker Iron Clip	25
44-M	Pole Brace (2)	1 30
45-M	Marker Stick Flat Spring	65
46-M	Steel Handle	1 75
47-M	Steel Blade, right	75
48-M	Shoe Blade, left	75
49-M	Marker Stick Support	65
50-M	Neckpoke Stop	15
51-M	Seat Spring	2 20
52-M	Handle for Seat with Bolts	55
53-M	Seat Board only	40
54-M	Marker Stick	1 85
55-M	Front Frame Piece	3 75
56-M	Rear Frame Piece	3 25
57-M	Pole	4 00
40-M	Shoe	2 00
41-M	R. H. Pole Riser	75
42-M	L. H. Pole Riser	75
43-M	Standard for Marker Stick	1 30
40-M	Shoe complete with Wings	3 50

LAND ROLLER PARTS

78	Wood Bearing for Shaft (2 pieces)	\$ 35
	Pole End	1 00
	End Brackets, cpt. (each)	5 75
	Shaft	8 00
4-P	Seat Spring Base	1 40
7-R	Head Box	90
8-R	Shaft Washer	25
11-R	End Bracket Casting (1923)	3 00
12-R	End Bracket Standard (1923)	85
13-R	End Bracket Casting (1927)	3 25
	Frame, Angle, each	5 50
	Seat	1 50
	Pole Braces, each	65
	Seat Spring	1 65
	Roller Pole	4 75

MILLER BEAN HARVESTER PARTS
Wood Frame and Steel Frame from 1925

50	Cast Drive Wheel, old and new machines	\$ 6 60
51	R. H. Lever, only	3 60
52	L. H. Lever, only	3 60
	Lever complete with Axle, each	6 55
	Lever complete less Axle and Washer..	5 00
57-B	R. H. Divider	2 75
58-B	L. H. Divider	2 75
	One pair Dividers complete (Right and Left)	14 50
59	Lever Circle	1 65
59-L	N. S. Circle	1 65
59-R	N. S. Circle	1 65
60	R. H. Steel Blade 31-inch and Bolts	2 50
61	L. H. Steel Blade 31-inch and Bolts	2 50
62	Divider Rod	1 75
63	Front Beam (wood) 45-inch long	1 75
64	Rear Beam (wood) 45-inch long	1 75
65	Small Wheel	95
66	R. H. Guard (Cast Wheel)	1 15
67	L. H. Guard (Cast Wheel)	1 15
68	Small Axle	35
69	Seat	1 50
70	Seat Spring	1 60
71	Back End Pole Bracket	2 25
72	R. H. Front Pole Bracket	1 40
73	L. H. Front Pole Bracket	1 40
74	Sway and Tilt Casting	2 20
76	Tilt Lever Complete	1 90
77	Pole, Wood only (Split)	5 50
78-B	Pole Iron	1 00
79	Divider Bar Extension	1 10
80	Sway Hitch-On Beam	1 10
81	Sway Lever Catch	85
83	Draft Rod	85
84	Draft Bracket	80
85	Lever Grip	40
86	Lever Plunger	45
88	Neckpoke with Loop and Eye-bolt Complete	2 50
89	Evenet	2 20

90	Small Axle Washer	20
91	Main Lever Washer	25
92	Small Spring	20
93	Lever Chain	30
94	Divider Bar Washer	25
95	Divider Rod Washer	25
97	Main Wheel Axle	1 25
98-D	Wrench	35
99	Plunger Spring	15
100	Spring Plate for Lever	25
102-B	Sway Lever Catch	70
103-B	Sway Lever complete	2 00
104-B	R. H. Guard for Steel Wheel	1 40
105-B	L. H. Guard for Steel Wheel	1 40
106-B	Divider Bar Washer	30
107-B	Main Wheel Washer	20
108	Lever Rod to Plunger	15
109-B	Main Wheel, steel	7 50
110-B	Frame R. or L.	4 25
111-B	R. H. Shank for 31-inch blade on Machine with 45-inch beams	6 60
112-B	L. H. Shank for 31-inch blade on Machine with 45-inch beams	6 60
126-B	R. H. Shank for 31-inch blade on Machine with 41-inch beams; also for 36-inch blade on machines with 45-inch beams	6 60
127-B	L. H. Shank for 31-inch blade on Machine with 41-inch beams; also for 36-inch blade on machines with 45-inch beams	6 60
132-B	Front Beam (Steel) 41-inch long	1 90
133-B	Rear Beam (Steel) 41-inch long	1 90
A-134-X	Box and Nut for Steel Wheel	1 50
134-B	Front Frame Filler Block (Wood) used on Steel Frame only	30
135-B	Rear Frame Filler Block (Wood) used on Steel Frame only	30
136-B	Front Beam (Steel) 45-inch long	1 90
137-B	Rear Beam (Steel) 45-inch long	1 90
138-B	R. H. Steel Blade 36-inch, and Bolts	2 75
139-B	L. H. Steel Blade 36-inch, and Bolts	2 75
140-B	Frame R. or L. for high machines	5 00
143-B	L. H. Blade 42-inch (since 1926)	3 50
144-B	R. H. Blade 42-inch (since 1926)	3 50
145-B	L. H. Extra High Guard (since 1926)	1 40
146-B	R. H. Extra High Guard (since 1926)	1 40
	Pole Sides steel R. or L. for Single Pole, each	1 40
	Single Pole, with side braces	7 30
	Single Pole, wood only	4 50
148-B	R. H. Shank for 42-inch Blades	6 60
149-B	L. H. Shank for 42-inch Blades	6 60
	42-inch Divider Rods	2 00
	A Sway and Tilt Washer	25
	Pole complete with All Castings	17 00
	Bolts for Steel Blades	04
	Machine and Carriage Bolts under 5-inch (except special)	06
	Machine and Carriage Bolts over 5-inch (except special)	07
1181	Washer for 1929 Wheel	20
N-47	Cap for 1929 Wheel	85

FOR 1914-1924 STEEL FRAME

All parts interchangeable except as follows:

115-B	R. H. Shank	7 25
116-B	L. H. Shank	7 25
117-B	Right Hand Lever	3 60
118-B	Left Hand Lever	3 60
119-B	Circle Right or Left	1 75
120-B	Lever Grip	40

PULVERIZER AND PACKER EXTRAS

1P	R. H. Connecting Arm	\$ 3 00
2P	L. H. Connecting Arm	3 00
3P	End Bracket Top Casting	4 00
4P	Seat Spring Base	1 40
5P	Connecting Arm Bracket	1 00
6P	Roller Bearing Housing	1 50
7P	Roller Bearing Housing Cap	45
8P	End Bracket Spreader Block	45
9P	Roller Bearing Cage Ring	30
10PX	Small Part of Rear Disc	1 00
11PX	Large Part of Rear Disc	1 15
12PX	Small Part of Front Disc	1 50
13PX	Large Part of Front Disc	1 80
14P	Tractor Hitch Clevis Casting, complete	2 00
	Roller Bearing Cage Complete (no housing)	2 00
18P	Shaft Washer	30

PULVERIZER AND PACKER EXTRAS—Continued

19P	Shaft Clamp Collar, each	55
20PX	Large Closed Part of Rear Disc	1 10
21PX	Large Closed Part of Front Disc	1 80
	Bracket Standard (steel) each	60
	Frame Angle, each	5 50
	Front Shaft	8 00
	Rear Shaft	8 00
	Team Pole (long)	4 75
	Short Pole	1 90
	Pole Braces, each	1 00
	Seat Spring	1 65
	Seat	1 50
	Grease Cup	25
17P	Thin Washers for Shaft	15

GARDEN PLOW PARTS

	Handles finished, each	85
	Handle rounds, each	15
	Wide Point with Bolt	30
	Narrow Point with Bolt	25
	Hillier with Landside	90
	Wheel	1 65
	Three Prong Attachment	1 10
	Wrench	30

ONE-HORSE CULTIVATOR EXTRAS

17CC	L. H. Wheel Block	30
18CC	R. H. Wheel Block	30
19CC	Sector for Double Lever	40
20CC	Sector for Expanding Lever	40
21CC	Gauge Wheel only	80
22CC	Draw Hook	40
23CC	Level Pawl or Plunger	30
24CC	Frame Spreader Block	50
25CC	Level Pawl Bracket	50
26CC	Expander Slide Block	55
27CC	Split Hub	40
	R. H. Tooth Standard	95
	L. H. Tooth Standard	95
	Handles, pair	2 30
	Handles, each	95
	Handle Braces, each	45
	Expanding Lever, complete	1 65
	Center Frame Bar	1 85
	Side Frame Bar	1 35
28CC	R. Horse Hoe Frame Bracket	75
29CC	L. Horse Hoe Frame Bracket	75
30CC	Ratchet Washer	30
31CC	Horse Hoe Standard	1 25
32CC	Corrugated Washer on Shank (1927)	30
33CC	Corrugated Washer on Bracket (1927)	30
34CC	Horse Hoe Standard (1927)	1 25
Points and wings see net list on cultivators.		

BOLTS

	Plow Bolts, 1½" and under	04
	Plow Bolts, 2" to 3½"	05
	Point Bolts in lots of 50	1 75
	Assorted Plow Bolts, lot of 50	1 75
	Set or Cap Screw for Plow, all sizes	08
	Main Standard Bolt for Wood Beam Plow	25
	Main Standard Bolt for Steel Beam Plow	10

SPRING TOOTH LEVER HARROW PARTS

4W	Clevis Ring	20
5W	Clevis Pin	10
6W	Hinge and tooth bar bracket with boss (front)	1 05
7W	4-hole draw clevis	1 10
8W	Adjusting Arm (right)	85
9W	Adjusting Arm (left)	85
10W	Sector	1 25
11W	Shift Lever Arm	1 25
12W	Tooth Bar Bracket, plain top (front) right	75
13W	Tooth Bar Bracket, plain top (front) left	75
14W	Clip for Tooth Bar	35
15W	Bushing for Tooth Bar	35
16W	Bushing and Tooth Clip	50
17W	Hinge and Tooth Bar Bracket with boss (front) 1922 only	1 30
18W	Hinge and Tooth Bar Bracket with eye (rear)	1 30
19W	Tooth Bar Hanger	85
20W	Middle Tooth Bar & Extension Bracket	1 30
21W	Rear Hinge with boss	85
22W	Tooth Bar Bracket (plain top)	75
23W	Hinge and Tooth Bar Bracket with eye (front)	1 15
24W	Spring Holder on Shift Lever	15
25W	Plunger Sleeve on Lever	50

32W	Tooth Bar Bracket and Handle Support (rear) 1-horse harrow	1 00
33W	Sector 1928	1 25
10C	Draw Hook for 1-horse harrow	65
313	Clevis for wood draw bar	45
	Shifting Lever complete (bolts to 11W)	1 65
	Trigger for Lever	25
	Spring for Pawl or Plunger	15
	Connecting Bar for Adjusting Arms	1 35
	Frame Extension Bar (bolts to 20W)	1 25
	Short Shoe for Lever Harrow	85
	Long Shoe for Lever Harrow	1 10
	Handle for 9-tooth 1-horse Harrow	1 75
	Angle Frame for 8-tooth center section (1 side long, 1 side short)	3 75
	Angle Frame for 9-tooth 1-horse harrow	4 50
	Angle Frame for 15 or 17-tooth Harrow R.H. section (1 side long, 1 side short)	3 75
	Angle Frame for 15 or 17-tooth harrow LH section (both sides long)	4 50
	2-Horse Draw Bar (wood only)	1 25
	3-Horse Draw Bar (wood only)	2 00
	Draw Hook and Hook Bolt for draw bar	55
	Clevis and Ring for draw bar	75
	4-rod Links and Ring with 2 eye bolts for 3-horse draw bar	1 65
	Channel Teeth Bar (give length and location of holes)	1 40
	Spring Teeth—See net list on harrows.	

SPRING TOOTH COMBINATION HARROW PARTS

2W	Tooth Clip	45
3W	Riser	25
4W	Clevis Ring	20
5W	Clevis Pin	10
313	Clevis for Draw Bar	45
	Angle Frame Bars	1 65
	Long Cross Bars (Wood)	1 10
	Short Cross Bars (Wood)	95
	Curved Cross Bars (Wood)	1 15
	Draw Bar only (Wood)	1 25
	Flat Draw Steel with twisted link	95
	Long Hook Rod with eyebolt	95
	Spring Teeth—See Net List on Harrows.	

WOOD SAWING MACHINES

1-X	Bearing Box Cap { babbitted cpt.	3 30
2-X	Bearing Boxes	40
3-X	Table Pivots	25
4-X	Table Pivot Washers	25
5-X	Frame Brackets	50
6-X	Saw Guard	1 25
7-X	Balance Wheel, Regular	9 00
8-X	6-inch Pulley	2 75
9-X	Bearing Clamps	85
10-X	Bearing Box Cap { babbitted cpt.	3 50
11-X	Bearing Boxes	20
12-X	Bearing Brackets	2 20
13-X	Table Stops	60
14-X	Roller Brackets	35
15-X	Table Brackets	40
16-X	Table Rollers	95
17-X	Balance Wheel, Extra Heavy	11 00
22-X	Mandrel Washers	90
23-X	Mandrel Nut	80
25-X	Wrench	30
26-X	12-inch Pulley and Balance Wheel	12 00
27-X	8-inch Pulley	4 15
28-X	10-inch Pulley	5 25
29-X	Mandrel Collar	55
30-X	Table Brackets	50
31-X	Table Bracket and Saw Guard	1 00
32-X	R. H. Table Braces	35
33-X	L. H. Table Braces	35
34-X	Stop Chain	35
35-X	Mandrel with Collar and Nut	7 00
36-X	Table Track	1 10
37-X	Saw Guard	70
38-X	Saw Guard Brace	45
39-X	Mandrel complete with Collar and Nut	7 00
40-X	Table Shaft for 4-foot Saw	90
	Table Shaft for 6-foot Saw	1 20
46-X	Frame Tie Rods	85
	Square Keys	25
50-X	Frame Base Sticks	1 40
51-X	Frame Cross Braces	1 10
52-X	Front Frame Standards	1 40
53-X	R. H. Rear Frame Standard	1 40
54-X	L. H. Rear Frame Standard	1 40
55-X	Table Standards	85
56-X	Table Back	85

WOOD SAWING MACHINES—Continued

57-X	Table End Cleats	40
58-X	Table Cleats	30
59-X	Cross Cleats	30
60-X	Table Board	1 40
61-X	Extension Frame Base Stick	1 00
62-X	Extension Frame Cross Stick	1 10
63-X	Extension Frame Standard	1 10
64-X	Extension Frame Pivot Block	35
74-X	Rolling Table Frame Pieces	1 10
77-X	Rolling Table Board Cleat	35
79-X	Table Wood Roller	55
80-X	Shims	15
81-X	Shims	15
82-X	Shims	15
83-X	Legs	85
84-X	Frame Beam	4 10
85-X	Frame End Piece	1 65
86-X	Stationary Table and Bearing Cross Brace	1 40
87-X	Rolling Table Track Cross Piece	1 45
88-X	Stationary Table Upper Cross Brace	15
89-X	Stationary Table Back Board	85
90-X	Stationary Table Board	1 10
91-X	Stationary Table Cross Cleat	15
93-X	Rolling Table Back Board	1 10
94-X	Rolling Table Board	1 40
95-X	Rolling Table Stop	15
	Rolling Table complete as shipped plus two 15X, 4 ft.	4 65
	Rolling Table complete as shipped plus two 15X, 6 ft.	5 25

LIME SOWER PARTS

No. CAST PARTS		
L34X	Main Wheel Box for 36-inch wheel (no pawl) uses square pawl	2 00
LD1320	Dust Chamber Cap	40
LD1321	Collar	25
LD1323	Center Bearing for No. 8	3 50
LD1324	Guide for Shift Lever	25
LD1325	Sleeve Bearing, Main Axle	30
LD1326	Agitator Sprocket	80
LD1327	Center Bearing for Nos. 5, 10 & 12	4 00
LD1328	Agitator Shaft Box	50
LD1329	Bearing for Main Axle	1 00
LD1330	Distributors on Main Axle	55
LD1330	Distributors on Main Axle with set screws	60
LD1331R	Agitator Sprocket and Wheel Ratchet	1 10
LD1331L	Agitator Sprocket and Wheel Ratchet	1 10

No. STEEL PARTS

1333	Lime Box End for Nos. 5 and 10	4 00
	Bottom (steel) for No. 5	4 40
	Bottom Slide Plate 57-inch long for No. 5	1 60
	Axle (one piece) for No. 5	3 75
1360	Lime Box End for Nos. 6 and 8	3 75
	Bottom (steel) for No. 6	5 25
	Bottom Slide Plate Right 30 3/4-inch for No. 6	1 00

	Bottom Slide Plate, Left 30-inch for No. 6	1 00
	Axles (2 pieces for No. 6 (each))	4 50
1332	Bottom (steel) for Nos. 8 and 10	7 00
1334	Bottom Slide Plate Right 44-inch long for Nos. 8 and 10	1 25
1335	Bottom Slide Plate Left 46-inch long for Nos. 8 and 10	1 25
1336	Axles (2 pieces) for Nos. 8 and 10 (each)	5 00
	Lime Box End for No. 12	4 00
1380	Bottom (steel) for No. 12	8 75
1387	Bottom Slide Plate Right 56 3/4-inch long for No. 12	1 60
1387	Bottom Slide Plate Left 56 3/4-inch long for No. 12	1 60
1383	Axles (2 pieces) for No. 12 (each)	6 00
1384	Truss Rod for No. 12	90
1385	Truss Rod Clips for No. 12 (each)	20
1386	Truss Rod Hooks for No. 12 (each)	25
1337	Agitator Shafts for Nos. 8 and 10	3 00
	Agitator Shafts for No. 5 (one piece)	3 75
	Agitator Shafts for No. 12 (2 pieces) (each)	3 75
1338	Wheel Shield (chain guard)	90
1339	Wheel Shield Lug	25
1340	Pole Braces (long)	90
1341	Pole Right Angle Brace	35
1342	Pole Brace to Box 32-inch long for Nos. 8, 10 and 12	85
1343	Shifting Lever	50
1344	Shifting Lever Bracket	20
1345	Side Box Braces for No. 10 only	55
1346	Bottom Slide Clips	20
1348	Chain Tightener Lug	20
1349	Chain Tightener Eyebolt	20
1350	Agitator Arm	20
1351	Slide Shifter	25
1352	Spacer Key	10
1353	Chain Holder Hook	25
1354	Hammer Strap	40
1355	Pawl and Links for Wheel (round)	35
1355 1/2	Pawl and Links (square from 1937)	35
1356	Spring for Pawl	10
1359	Side Box Braces for No. 8 only	55
	Steel Wheel 36-inch complete	8 50
	Washers for Agitator Box	15
	Washers for Square Axle	15
	Strap Hinges	15
	Oil Tubes for No. 8 (12-inch)	30
	Oil Tubes for No. 10 and 12 (15- inch)	30
	Grease Cups	25
	Nipples for Grease Cups	15
	No. 32 Chain 27-links	70
	No. 1 Chain, 20-inch long (for spreader board)	20
	Screens complete (each)	1 15

WOOD PARTS

	Pole	4 75
	Cover (2 pieces) each	2 00
	Sides Complete (2 pieces) each	3 00
	Scatter Board	1 00

CAMBRIDGE PLOWS

Number	Beam	Moldboard	With Clevis Only	With Wheel and Clevis	Full Rigged with Jointer	Number	Beam	Moldboard	With Clevis Only	With Wheel and Clevis	Full Rigged with Jointer
1 1-horse	Cast	Chill	10.25	11.65		*16A-20	Wood	Sol. Steel			26.40
11	Steel	Chill	14.30	15.70	19.60	*16B-20	Wood	Sol. Steel			25.30
11	Steel	SC. Steel	17.30	18.70	22.60	*16C	Wood	Chill		15.95	17.60
12	Steel	Chill	14.30	15.70	19.60	26	Steel	SC. Steel	20.10	21.50	25.40
12	Steel	SC. Steel	17.30	18.70	22.60	27	Steel	SC. Steel	22.25	23.65	27.55
*These plows equipped with colter.						29C	Steel	Sol. Steel			31.90
Plows regularly equipped with jointer, but ordered with colter, deduct per plow50c						29XC	Steel	Sol. Steel			33.60
						52	Steel	SC. Steel	20.10	21.50	25.40

All parts of the No. 29-C and 29X-C Plows are the same, with the exception of the boards and points.

All parts of the No. 26 and 27 Plows are interchangeable, with the exception of the boards and points.

All parts of the No. 11 and 12 Plows are interchangeable, with the exception of boards, points and landsides.

MISCELLANEOUS PARTS

29I Crotch 29, 29X Plows	\$ 1 40
29CB Crotch Bolt 29, 29X Plows	60
A Crotch, 16A Plows	712 1 30
B Crotch, 16B Plows	713 1 30
C Crotch, 16C Plows	714 1 15
29K Standard Brace, 29, 29X Plows	1 15
29J Latch Arm, 29, 29X Plows	1 15
29LX Latch, L. H., 29, 29X Plows	50
29RX Latch, R. H., 29, 29X Plows	50
29L-W Lever Washer, 29, 29X Plows	20
29S Spring, 29, 29X Plows	45
29SW Spring Washer, 29, 29X Plows	20
29SL Shifting Lever, 29, 29X Plows	1 45

29 H. B. Handle Brace, 29, 29X Plows	80
29LP Long Pitman, 29, 29X Plows	80
P2 Short Pitman, 29, 29X Plows	55
29C Inner Shoe and Rivets	2 50
29R O. S. Latch Dog, 29, 29X Plows	40
Latch Arm, 16A, 16B, 16C Plows	1 15
Latch Dog, 16A, 16B, 16C Plows	40
Spring, 16A, 16B, 16C Plows	50
Spring Washer, 16A, 16B, 16C Plows	20
Long Pitman, 16A, 16B Plows	80
Short Pitman, 16A, 16B Plows	50
Point Clip, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	20
AX12 Beam Head, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	1 00
Rub. Iron, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	50
B. W. Beam Washer, 38, 39, 40, 1, 2 Plows ..	25
Beam Washer, 60, 61 Plows	25
10-B Guide Base End on Beam, 29 Plow	65
Bolts—See page 8.	
R16G Latch for 16A and B	35
L16H Latch for 16A and B	35

CAMBRIDGE PLOW EXTRAS

Number	SHARES				Landside	Shoe	MOLDBOARDS			Shin	Standard	Frogs and Saddles	Beams	Jointer Moldboards	
	Plain Stony		Colter	Jointer			Chill	Sol. Steel	S. C. Steel						
1	.90		1.05	.30	2.50	.95			8.25		4.00			8.75	.55
1 1-H	.70				1.20		4.00							5.50	
2	.80		.95	.30	2.50	1.00			7.75		4.00			8.75	.55
2 Rich	1.00						4.50				4.00				
5-S	1.00														
7	.85						4.50				3.75			6.50	
10 -	1.00					1.45					4.00				
11	.90		1.05	.30	1.20		4.75		7.75		5.25	3.00		8.75	.55
12	.90		1.05	.30	1.20		4.75		7.75		5.25			8.75	.55
16A	1.00					1.20					4.00	1.50		5.75	
16B	.95					1.20		6.75			4.00	1.50		5.75	
16C	.80					.85	4.50				3.25			4.50	
19	.80			.30	1.20		4.50							4.75	
26	.80		.95	.30	2.50	1.00			7.75	.95	4.00			7.50	.55
27	.85		1.00	.30	2.50	1.00			8.25	.95	4.00			7.50	.55
29	.95			.40		1.45		7.25	8.50		4.25	2.75		7.50	.70
29X	1.05			.40		1.45		7.75	9.00		4.25	2.75		7.50	.70
38	.80		.95	.30	2.50	1.00			7.75	1.05	4.00			7.50	.55
39	.85		1.00	.30	2.50	1.00			8.25	1.05	4.00			7.50	.55
38 Sul	.80		.95	.30	2.50	1.00			7.75	1.05	4.00			8.50	.55
39 Sul	.85		1.00	.30	2.50	1.00			8.25	1.05	4.00			8.50	.55
40	.80		.95	.30	2.50	1.00			7.75	1.05	4.00			7.50	.55
52	.80		.95	.30	1.20				7.75	.90	4.00			7.50	.55
60 Sul	.80		.95	.30	2.50	1.00			7.75	1.05	4.00			8.50	.55
61 Sul	.85		1.00	.30	2.50	1.00			8.25	1.05	4.00			8.50	.55

COLTERS AND PARTS FOR
CAMBRIDGE PLOWS

Colters complete for No. 16C 1-horse hillside plow	\$ 2 20
Colters complete for Nos. 16A and B hillside plows	3 60
Colters complete for all 2 and 3-horse flat land plows and sulkies	4 25
Colters complete for Cambridge No. 29 series steel beam hillside plows	5 00
Colters less attachments for 2 and 3-horse plows	2 50
Colter Blades for Nos. 16A and 16B prior to 1920	1 75
Colter blade only for 29 also 16A and 16B since 1920	2 00
701 Colter Pitman Eye for Nos. 16A and 16B, 29-29X Plows	55
702 Colter Support and Slide Bracket for No. 29 Plows	1 65
703 Colter Slide for No. 29 Plow	55
704 Colter Slide for Nos. 16A20 and 16B20	55
705 Colter Slide Bracket for Nos. 16A20 and 16B20 Plows	1 10
706 Colter Support for Nos. 16A20 and 16B20 Plows	1 00
721 Colter Clip for 16C	40
722 Colter Clip Wedge for 16C	25
723 Colter Slide for 16A20 and 16B20 from 1924	55
724 Colter Slide Bracket for 16A20 and 16B20 from 1924	1 10
Steel Pitman Clip for Nos. 16A and 16B Plows	50
Steel Pitman Rod only for Nos. 16A and 16B Plows, 1924 style	65
Steel Pitman Rod only for Nos. 16A and 16B Plows	65
29 R. C. Colter Block, 29, 29X Plows	1 10
29 L. C. Colter Block, 29, 29X Plows	1 10
29 C. S. Colter Slide, 29, 29X Plows	45
R. & L. Colter Block for 16A, 16B Plows	1 35
16L Colter Slide for 16A, 16B Plows	45
AX16½ Colter Block, 38, 39, 40, 1, 2, 26, 27 Plows	1 00
AX6 Colter Block, 60, 61 Plows	1 00
Colter Clip, 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12	45
Colter Clip Bar, 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12	45
LXX Colter Clipwedge, 38, 39, 40, 1, 2, 60, 61 Plows	45
Colter Clipwedge, 26, 27 Plows	45
13" Rolling Colters complete, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	7 00

JOINTERS AND PARTS FOR
CAMBRIDGE PLOWS

Jointers complete for all 2 and 3-horse flat land plows	\$ 4 50
Jointers complete for Cambridge two-horse steel beam hillside plows	5 25
29RJ Jointer Block for 29, 29X Plows	1 40
29LJ Jointer Block for 29, 29X Plows	1 40
AX16½ Jointer Block for 38, 39, 40, 1, 2, 26, 27 Plows	1 00
AX6 Jointer Block for 60, 61 Plows	1 00
29JS Jointer Shank for 29, 29X Plows	2 00
Jointer Shank for 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12 Plows	2 00
29JC Jointer Collar, 29, 29X Plows	40
29JS Jointer Slide, 29, 29X Plows	45
Jointer Clip, 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12 Plows	45
Jointer Clip Bar, 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12 Plows	45
LXX Jointer Clip Wedge, 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12 Plows	45
Jointer Clip Wedge, 26, 27 Plows	45
AX16 Jointer Foot, 38, 39, 40, 1, 2, 26, 27 Plows	1 40
Jointer Foot, 11, 12 Plows	1 40
61D Jointer Foot, 60, 61 Plows	1 40
716 Jointer Hanger, R., for 1924 No. 29 Plow	1 00
717 Jointer Hanger, L., for 1924 No. 29 Plow	1 00
718 Jointer Shift for 1924 No. 29 Plow	55
719 Jointer Collar for 1924 No. 29 Plow	40

WHEEL AND PARTS FOR
CAMBRIDGE PLOWS

Wheel and Standard comp. with attachments, 1-horse Plow	1 65
---	------

Wheel and Standard comp. with attachments, 2 and 3-horse Plow	1 65
Wheel and Standard, comp., less attachments	1 45
Wheel and Axle complete for all Plows	1 10
Wheel only for all Plows	80
29 W. S. Wheel Standard for 29, 29X Plows, each	50
W. S. Wheel Standard for 38, 39, 40, 1, 2, 26, 27 Plows, each	50
Wheel Standard for 60, 61, 16A, B, and C, Plows, each	50
Wheel Standard for 11, 12 Plows	1 00
10 D. R. Wheel Block, 29, 29X Plows	45
10 D. L. Wheel Block, 29, 29X Plows	45
R. & L. Wheel Block, 16A, 16B, 16C Plows	40
AX14 Wheel Block, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	40
AX15 Wheel Block, 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	40
Wheel Block, 11, 12 Plows	55
29WF Wheel Ferrule, 29, 29X Plows	30
Wheel Ferrule for all other Plows	30

HANDLES AND PARTS FOR
CAMBRIDGE PLOWS

Handles, complete for all 2-horse Plows	\$ 2 80
Handles, complete for all 1-horse Plows	2 30
Handles, single, for all Plows except one-horse Plows	1 20
Handles, single, for all one-horse Plows	95
Handle Rounds	25
Handle Rod and Nut	25
Handle Braces, 29, 29X Plows, per pair	90
Handle Braces, upper, 16A, 16B, 16C Plows	90
Handle Braces, Lower, R. or L., 16A, 16B, 16C Plows	85
AX10 Handle Braces, upper, 38, 39, 40, 1, 2 Plows	1 25
Handle Braces, upper, 60, 61 Plows	1 25
Handle Braces, lower, 60, 61 Plows	85
Handle Braces, R. or L., 60, 61 Plows	45
LHB Handle Braces, L. H., 26, 27 Plows	60
RHB Handle Braces, R. H., 26, 27 Plows	60
AX10½ Upper Handle Brace Attachment, 38, 39, 40, 1, 2 Plows	65
AX11 Lower Handle Brace Attachment, 38, 39, 40, 1, 2 Plows	65
LHR Lower Handle Brace, 26, 27 Plows	60
AHB Lower Handle Brace, L. H., 38, 39, 40, 1, 2 Plows	60
LHB Lower Handle Brace, R. H., 38, 39, 40, 1, 2 Plows	60
RHI Handle Iron, R. H., 26, 27 Plows	60
LHI Handle Iron, L. H., 26, 27 Plows	60
Handle Iron, 11, 12 Plows	60
L. H. 27 O. S. Adj. Handle, 26, 27 Plows	85
R. H. 27 O. S. Adj. Handle, 26, 27 Plows	85
L. H. Adj. Handle, 11, 12, 7 Plows	85
R. H. Adj. Handle, 11, 12, 7 Plows	85
Handle Iron, No. 1, one-horse Plow	45
H. W. Handle Washer, 26, 27 Plows	25
16 L. Handle Brace for 16A and 16B Plows	80
16 R. Handle Brace for 16A and 16B Plows	80
16CL and CR. Handle Brace for 16C Plow	80
52A Handle and Moldboard Brace	65
16A Handle Brace or Notched Rod for 16A, 16B, 16C, 29, 29X Plows	45

CLEVISES AND PARTS FOR
CAMBRIDGE PLOWS

2-horse Clevis complete with ring, 26, 27 Plows	1 50
3-horse Clevis complete with ring, 26, 27 Plows	1 65
61E 3-horse Clevis, 60, 61 Plows	1 60
AX13 3-horse Clevis, 38, 39, 40, 1, 2, 26, 27 Plows	1 60
10A Clevis 29, 29X Plows	1 45
Clevis 16A, 16B Plows	1 45
Clevis 16C Plow	1 30
AX23 Clevis 38, 39, 40, 1, 2, 60, 61, 26, 27 Plows	1 45
Clevis D2, 11, 12 Plows	1 00
Clevis, No. 1 one-horse Plow, No. 99	1 30
Small or End Clevis, 16C Plow	35
No. 2 Small Clevis 38, 39, 40, 1, 2, 60, 61, 26, 27, 11, 12, 7, and No. 1 one-horse Plow	35
Shifting Clevis complete for 29, 29X Plows	3 30
Clevis Pin	10
10C Draw Hook 29, 29X, 16C Plows	65
Shift Rod, 16A, 16B, 16C Plows	1 45
16E Hook 16A, 16B Plows	65

INDEX FOR LE ROY PLOWS AND REPAIRS

Bolts	8
Beams	3
Bean Harvester Parts	7
Colters and Parts	4-5
Clevises	5
Cultivator Parts	8
Harrow Extras	8
Hiller Extras	6
Handles and Parts	4
Jointers and Parts	2-3
Landsides, Shoes and Shins	3
Marker Parts	6-7
Moldboards	3
Miscellaneous	4
Plows, Walking	2
Pulverizer and Packer Parts	7-8
Roller Parts	7
Sulky Plow Parts	5-6
Shares and Jointer Points	3
Standards, Frogs and Saddles	3
Wheels and Parts	3-4
Shovel Plow Parts	6
Lime Sower Parts	9
Wood Sawing Machine Parts	8-9

INDEX FOR CAMBRIDGE PLOWS AND REPAIRS

Bolts	8
Beams, Shares, Landsides, Shoes, Moldboards, Shins, Standards, Frogs and Saddles	10
Clevises, Colters, Jointers, Wheels and Handles	11
Miscellaneous	10
Plows, Walking	10
Walking Plow Parts	10-11
Wing and Disc Hiller Parts	6