


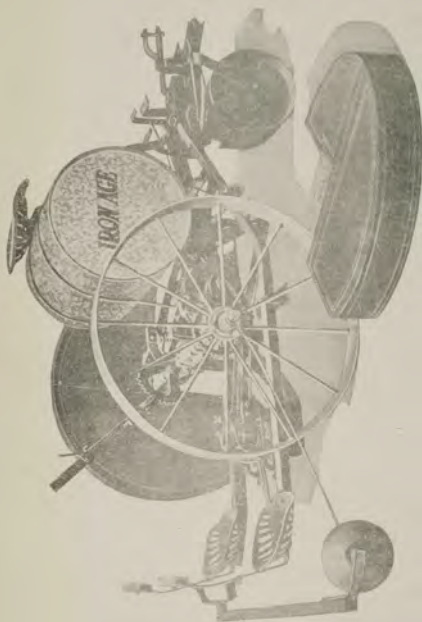

REPAIR PARTS PRICE LIST

for

FARQUHAR
IRON AGE
YORK, PA.

STANDARD TRANSPANTER

Model 501

★

A. B. FARQUHAR
COMPANY

YORK, PA.

DIVISION OF

THE OLIVER CORPORATION

★

Branches in

DALLAS, TEXAS

COLUMBUS, GEORGIA

GULEPH, ONT., CAN.

Effective Date of Prices

October 31, 1950

DIRECTIONS FOR ORDERING PARTS

ALL FORMER PRICES AND LISTS ARE HEREBY CANCELLED

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

NO SINGLE ORDER FILLED FOR LESS THAN TWENTY-FIVE CENTS

DIRECTIONS

1ST. TURN TO THE PAGE OF THE PLATE SHOWING PARTS OF TRANSPLANTER.

2ND. IF PART WANTED IS A CASTING, THE NUMBER WILL BE FOUND ON IT. IF PART IS NOT A CASTING, OBTAIN NUMBER BY REFERRING TO PLATE OR PLATES AND DESCRIPTION OF THE PART OPPOSITE THE CORRESPONDING ITEM NUMBER.

3RD. WHEN ORDERING, GIVE THE SHOP NUMBER OF TRANSPLANTER, IF POSSIBLE.

4TH. IF THE PART WANTED HAS BEEN BROKEN AND CANNOT BE IDENTIFIED EITHER BY NUMBER OR DESCRIPTION, MAIL US A DRAWING OF SAME OR THE PART ITSELF. BUT MAKE CERTAIN YOUR NAME AND ADDRESS IS PLAINLY ATTACHED THERETO.

5TH. ALWAYS PLAINLY STATE YOUR NAME, POST OFFICE, AND SHIPPING ADDRESS AND HOW YOU WISH REPAIRS SENT. ALL PANCEL POST SHIPMENTS ARE INSURED.

6TH. AS AN ACCOMMODATION TO THE TRADE WHO HAVE NO ACCOUNT WITH US, WE WILL PROMPTLY SEND SAME C.O.D., AND PAYMENT CAN BE MADE UPON THEIR ARRIVAL.

INDEX TO PLATES

PLATE	PAGE
1. FRAME, REAR GANG AND MARKER POLE	3
2. AXLE ASSEMBLY	5
3. TRIP SHAFT ASSEMBLY	6
4. FIG. 62 FERTILIZER DISTRIBUTOR	7
5. FERTILIZER DRIVE PARTS	9
6. DOUBLE DISC OPENING PLOW	10
7. TANK AND TIE RODS	11
8. RIGID TRACTOR HITCH	12
9. FIG. 12 PRESS WHEEL, FIG. 11 PRESS PLATE, FIG. 19 TRACTOR HITCH	13
10. FIG. 13 LEAF SPRING PRESS PLATE	14
11. FIG. 15 SINGLE CASTER WHEEL, FIG. 14 PIVOT WHEEL FRONT TRUCK	15
12. FIG. 16 DOUBLE WHEEL FORE TRUCK	16
13. TONGUE, DOUBLE TREE, SINGLE TREE	17
14. WATER VALVE ASSEMBLY	18
NUMERICAL INDEX FOR STANDARD TRANSPLANTER	19

FRAME, REAR GANG AND MARKER POLE

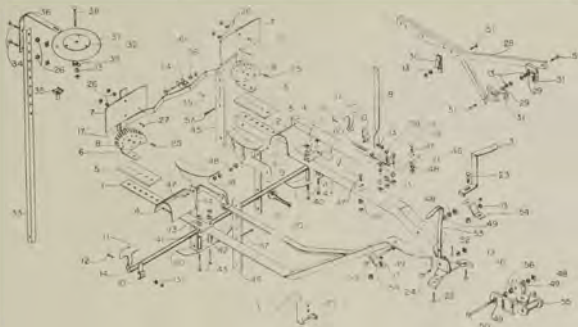


PLATE 1

PLATE	ITEM	PART NO.	DESCRIPTION
1	1	2880R	R. H. MAIN FRAME ANGLE
1	2	2880L	L. H. MAIN FRAME ANGLE
1	3	2938	FRONT FOOT REST
1	4	46 11 74	LEG REST
1	5	2910	SEAT REST
1	6	2925A	BACK REST SUPPORT
1	7	7574	BACK REST
1	8	B118	SEAT
1	9	7563	LEVER, L. H. SIDE ONLY
1	10	B115	SCRAPER CAP
1	11	B114	WHEEL SCRAPER
1	12		CARRIAGE HEAD BOLT 3/8 X 1 3/4 AND NUT
1	13		LOCK WASHER 3/8
1	14	2883	SCRAPER PIPE
1	15	B105	ARM
1	16	B111	CASTER WHEEL CIRCLE BRACKET
1	17	2927	MARKER POLE SUPPORT
1	18	B222A	R. H. TANK SUPPORT
1	19	B221A	L. H. TANK SUPPORT
1	20	B882AR	R. H. TANK REST
1	21	B882AL	L. H. TANK REST
1	22		PLOW BOLT 3/8 X 1 3/4 AND NUT
1	23		CARRIAGE HEAD BOLT 7/16 X 1 1/2 AND HEX NUT
1	24		MACHINE BOLT 3/8 X 2 AND NUT
1	25		CARRIAGE HEAD BOLT 5/16 X 3/4 AND NUT
1	26		LOCK WASHER 5/16
1	27		ROUND HEAD SCREW 5/16 X 3/4 AND NUT
1	28	2887	DRAG BAR, REAR GANG
1	29	B133	STUD WASHER, REAR GANG
1	30	B129	GUIDE, REAR GANG
1	31	B106	COUPLING
1	32	B154	DISC HUB, MARKER POLE ASSEMBLY

FRAME, REAR GANG AND MARKER POLE

PLATE	ITEM	PART NO.	DESCRIPTION
1	33	2961	MARKER POLE
1	34		CARRIAGE HEAD BOLT 5/16 X 2 1/4 AND NUT
1	35	B 155	SPINDLE
1	36	2958	SUPPORT, MARKER POLE ASSEMBLY
1	37	2957	CONCAVE DISC ASSEMBLY, MARKER POLE
1	38		CARRIAGE HEAD BOLT 3/8 X 4 AND NUT
1	39	2959	CLIP
1	40	2923	FOOT REST, REAR
1	41	2924	YOKE
1	42	B 127	SPACER
1	43		MACHINE BOLT 3/8 X 3 AND NUT
1	44	2888	DRAG BAR ADJUSTING BAR
1	45	2886	GANG ADJUSTING BAR
1	46	2881 A	FRONT TIE PIECE
1	47		CARRIAGE HEAD BOLT 7/16 X 1 1/4 AND NUT
1	48		LOCK WASHER 7/16
1	49		STANDARD WASHER 7/16
1	50		MACHINE BOLT 7/16 X 7 AND NUT
1	51		CARRIAGE HEAD BOLT 3/8 X 2 AND NUT
1	52	2932	SPRING
1	53	2931 A	LOCK LEVER
1	54	2939	BRACKET
1	55	B 107	PIVOT BLOCK, CASTER WHEEL SOCKET
1	56	7561	BUSHING
1	57		COTTER 3/8 X 1 1/2
1	58	2936	HOLDER FOR SPRING
1	59		MACHINE BOLT 3/8 X 1 1/2 AND NUT
1	60	2935	SPRING
1	61	2928	MARKER POLE CLIP

AXLE ASSEMBLY

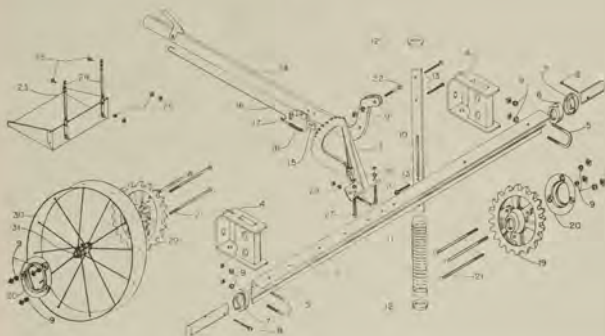


PLATE 2

PLATE	ITEM	PART NO.	DESCRIPTION
2	1	2884	AXLE
2	2	2885	AXLE SUPPORT
2	3	B103	QUADRANT
2	4	B110	GANG ADJUSTER CLAMP
2	5	2909	U BOLT
2	6	B131	AXLE COLLAR, LEFT SIDE ONLY
2	7	B132	TAKE UP WASHER AND SAND CAP
2	8		COTTER 5/16 X 2 1/4
2	9		LOCK WASHER 3/8
2	10	2895	PRESSURE SPRING BAR
2	11	2894	PRESSURE SPRING, 23 COILS
2	12	B130	SLOT WASHER
2	13		COTTER 3/8 X 2
2	14	46 11 75	PRESSURE LEVER, WELDED
2	14	9601	LEVER ASSEMBLY
2	15	2800	PAWL GUIDE
2	16	2893	SPRING, 13 COILS
2	17	2891	PAWL
2	18	2892A	PULL ROD
2	19	B223A	DRIVE SPROCKET, USE ON L. H. WHEEL WITH FIG. 62 ONLY
2	20	B113A	CLAMP PLATE
2	21		CARRIAGE HEAD BOLT 3/8 X 5 AND NUT
2	22		MACHINE BOLT 3/8 X 1 3/4
2	23	46 11 86	PLANT TRAY, RIVETED
2	24	9644	KINGE ASSEMBLY
2	25		MACHINE BOLT 5/16 X 3/4 AND NUT
2	26		LOCK WASHER 5/16
2	27		MACHINE BOLT 7/16 X 2 3/4
2	28		LOCK WASHER 7/16
2	29	B112	SPROCKET, R. H. SIDE ONLY, (20 TOOTH)
2	30	2985	36 INCH DIA. WHEEL
2	31	58545	WHEEL HUB

TRIP SHAFT ASSEMBLY

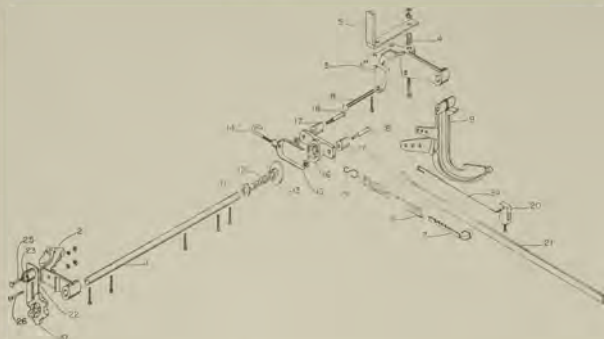


PLATE 3

PLATE	ITEM	PART NO.	DESCRIPTION
3	1	2902	TRIP SHAFT
3	2	B121	TRIP SHAFT BRACKET, OUTSIDE
3	3	B120	TRIP SHAFT BRACKET, INSIDE
3	4	2901	SPRING, 5 COILS (194148)
3	5	B128	LEVER HANDLE
3	6	2898A	TRIP SPRING
3	7	2930	NOTCHED CLIP
3	8	2907	PIN FOR TRIP ARM ON TRIP SHAFT
3	9	B122	TRIP ARM
3	10	B138A	SPROCKET, 5 POINT
3	10	B139A	SPROCKET, 6 POINT (SHOWN)
3	10	B140A	SPROCKET, 7 POINT
3	10	B141A	SPROCKET, 8 POINT
3	10	B142A	SPROCKET, 9 POINT
3	10	B143A	SPROCKET, 10 POINT
3	10	B144A	SPROCKET, 11 POINT
3	11	B130	SPRING PRESSURE WASHER
3	12	2904	CLUTCH SPRING
3	13	B126	CLUTCH ON SHAFT PLATE
3	14	2905	HOOK BOLT ON TRIP SHAFT
3	15	B124	BARREL RAIL WEDGE
3	16	B125	TRIP SHAFT CLUTCH PLATE
3	17	B123	TRIP STUD ROLLER
3	18	2906	STUD FOR ROLLER
3	19	2899	S. HOOK
3	20	B197	VALVE LIFTER GAUGE LINK BLOCK
3	21	2896	SLIDE VALVE ROD
3	22	2908	ARM
3	23	B156	ROLLER (CHAIN TIGHTENER ASSEMBLY)
3	24	2897	PULL ROD
3	25		MACHINE BOLT 3/8 X 1 3/4 AND NUT
3	26		CARRIAGE HEAD BOLT 3/8 X 1 1/2 AND NUT

FIG. 62 FERTILIZER DISTRIBUTOR

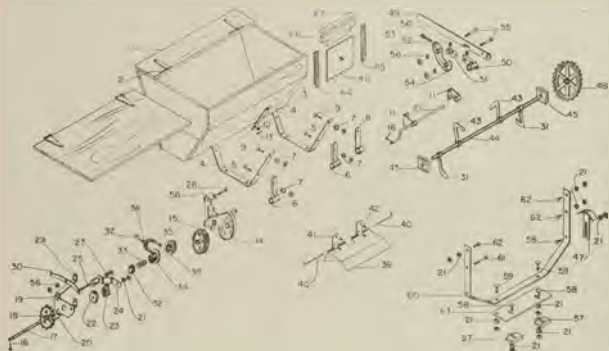


PLATE 4

PLATE	ITEM	PART NO.	DESCRIPTION
4	1	7582	WOOD HOPPER
4	2	4606	HINGE ROD FOR FERTILIZER HOPPER
4	3	4600	LINK FOR 4599
4	4	2809H	FERTILIZER HOPPER STAY IRON
4	5		CARRIAGE HEAD BOLT 5/16 x 1 1/2 AND NUT
4	6	P504	BEARING
4	7		LOCK WASHER 5/16
4	8	4602	BEARING FOR FRONT FERTILIZER BELT SHAFT
4	9		CARRIAGE HEAD BOLT 5/16 x 1 1/4 AND NUT
4	10	4599	ADJUSTING CRANK FOR GATE
4	11	P432	BEARING FOR ADJUSTING-CRANK
4	12		STANDARD WASHER 1/2
4	13		COTTER 3/16 x 1 (AGITATOR GATE PIN)
4	14	8173A	GEAR BEARING PLATE 11/16 SHAFT, FIG. 62
4	15	P427A	SPUR GEAR 31 TOOTH
4	16		COTTER 3/16 x 1 1/4
4	17	7593	DRIVE SHAFT
4	18	P261	SPROCKET 14 TOOTH
4	19	7590	GEAR BEARING PLATE 7/8 SHAFT, FIG. 62
4	20		CARRIAGE HEAD BOLT 3/8 x 2 AND NUT
4	21		LOCK WASHER 3/8
4	22	088M	SERRATED WASHER
4	23	K430	SERRATED HOLDER
4	24	7592	CHAIN TIGHTENER ARM
4	25		MACHINE BOLT 7/16 x 2 1/2 AND NUT
4	26	P224	ROLLER
4	27		LOCK WASHER 7/16
4	28		CARRIAGE HEAD BOLT 5/16 x 2
4	29	7591	SUPPORT FOR 7590
4	30	7615	BRACE
4	31	C21M	H. H. AGITATOR FINGER
4	32	S619A	BEARING

FIG. 62 FERTILIZER DISTRIBUTOR

PLATE	ITEM	PART NO.	DESCRIPTION
4	33	2904	SPRING
4	34	R175	CLUTCH
4	35	R104	CLUTCH SHIFTER FORK
4	36		SQUARE NUT 3/8
4	37	7616	CONNECTIVE LINK
4	38	R174	SPUR PINION AND CLUTCH
4	39	7586	FRONT COVER OVER FERTILIZER BELT
4	40	4606	HINGE ROD
4	41	2870	HINGE
4	42		WOOD SCREW #8 X 3/4
4	43	C2M	L. H. AGITATOR FINGER
4	44	4801	FERTILIZER AGITATOR SHAFT
4	45	4803	WOOD BEARING FOR AGITATOR SHAFT
4	46	42 35 19	FERTILIZER GATE FIG. 62
4	47	4595	AGITATOR CHAIN TIGHTENER
4	48	P505	SPROCKET 24 TOOTH - AGITATOR SHAFT
4	49	4601	LEVER
4	50	P431	ADJUSTING LEVER SOCKET
4	51	P429	STOP - ON ADJUSTING RACK
4	52	4607 A	SPRING
4	53	P430	LATCH BOLT FOR STOP
4	54	P428	ADJUSTING LEVER RACK
4	55		CARRIAGE HEAD BOLT 5/16 X 2 1/2 AND NUT
4	56		STANDARD WASHER 5/16
4	57	R153	WEDGE
4	58		CARRIAGE HEAD BOLT 3/8 X 1 3/8 AND NUT
4	59		CARRIAGE HEAD BOLT 3/8 X 1 1/2 AND NUT
4	60	7588	FERTILIZER SUPPORT
4	61		CARRIAGE HEAD BOLT 3/8 X 3 AND NUT
4	62		CARRIAGE HEAD BOLT 3/8 X 1 1/4 AND NUT
4	63	7589	PLATE
4	64	4610 A	R. H. FERTILIZER GATE GUIDE
4	65	4611 A	L. H. FERTILIZER GATE GUIDE
4	66	4608	SHIELD OVER GATE
4	67	4612	STRIP OVER GATE SHIELD

FERTILIZER DRIVE PARTS

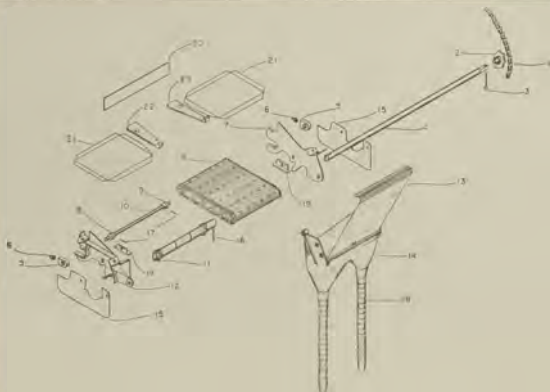


PLATE 5

PLATE	ITEM	PART NO.	DESCRIPTION
5	1	4808	AGITATOR DRIVE CHAIN #32 x 29 LINKS
5	2	P85A	SPROCKET, 7 TOOTH
5	3		COTTER 3/16 x 1 1/4
5	4	7594A	FERTILIZER BELT SHAFT
5	5	4802	OUTER BEARING FOR FERTILIZER BELT SHAFT
5	6	07 91 02	ALEMITE
5	7	P502A	L. H. SIDE BELT GUIDE, FIG. 62
5	8	46 11 94	FERTILIZER BELT COMPLETE (2686)
5	9	P496	ROLLER
5	10	4533	RACK ROLLER SHAFT FOR FERTILIZER BELT
5	11	P512	FERTILIZER BELT ROLLER, FRONT
5	12	P501A	R. H. SIDE BELT GUIDE FIG. 62
5	13	7585	SHIELD UNDER FERTILIZER BELT FIG. 62
5	14	6176	FERTILIZER TUBE HOLDER FIG. 62
5	15	4604A	SIDE BELT SHIELD
5	16		GROOVE PIN 1/4 x 1 1/2
5	17		GROOVE PIN 3/16 x 1 1/4
5	18	5259	FERTILIZER TUBE WITH 7642 SPOUT
5	19	795M	LOWER BELT GUIDE
5	20	2689	SHIELD FOR REAR OF FERTILIZER BELT (RUBBER CLOTH)
5	21	4602	BOTTOM SHIELD
5	22	D8M	R. H. UPPER BELT GUIDE
5	23	D9M	L. H. UPPER BELT GUIDE

DOUBLE DISC OPENING PLOW

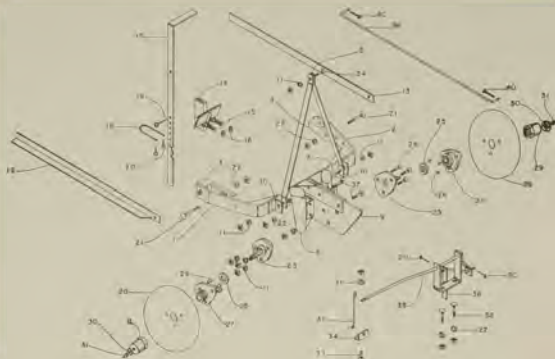


PLATE 6

PLATE	ITEM	PART NO.	DESCRIPTION
6	1	46 11 92	R. H. SUPPORT ARM, WELDED
6	2	46 11 91	L. H. SUPPORT ARM, WELDED
6	3	8177A	R. H. HANGER
6	4	8178A	L. H. HANGER
6	5	7675	BRACE
6	6	7677A	R. H. FERTILIZER TUBE GUIDE
6	7	7678A	L. H. FERTILIZER TUBE GUIDE
6	8	P352L	GREASE CUP
6	9	7671	HOLDER
6	10		MACHINE BOLT 5/16 x 1 AND NUT
6	11		LOCK WASHER 5/16
6	12	7617	R. H. ANGLE BRACE
6	13	7618	L. H. ANGLE BRACE
6	14	8228	ADJUSTER
6	15	7602	SPRING
6	16		STANDARD WASHER 5/16
6	17	7674	ADJUSTING LEVER
6	18	7601	SPRING CLEVIS
6	19		COTTER 5/16 x 1
6	20		COTTER 7/64 x 3/4
6	21		CARRIAGE HEAD BOLT 3/8 x 3 AND NUT
6	22		LOCK WASHER 3/8
6	23	P404	AXLE FOR DISC HUB
6	24		CARRIAGE HEAD BOLT 5/16 x 1 1/2 AND NUT
6	25	2761	FELT WASHER
6	26		ROUND HD. RIVET 5/16 x 3/4
6	27	P350AH	R. H. DISC HUB
6	28	7670	CONCAVE DISC
6	29	P352R	GREASE CUP
6	30	P353	WASHER
6	31	07 91 02	ALEMITTE
6	32	7486	CATCH HOOK

TANK AND TIE RODS

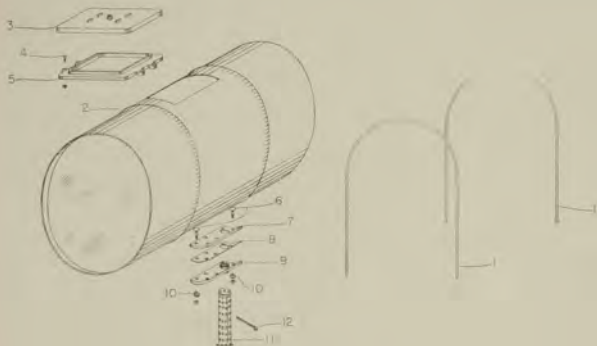


PLATE 7

PLATE	ITEM	PART NO.	DESCRIPTION
6	33		CARRIAGE HEAD BOLT 5/16 x 1 AND NUT
6	34	7487	HOLDER
6	35	7484	FOOT LEVER COMPLETE (WELDED)
6	36	7608	LOCK LEVER
6	37		MACHINE BOLT 3/8 x 1 3/4 AND NUT
6	38	P350AL	L. H. DISC HUB
6	39	7596	CLUTCH SHIFTER
6	40		COTTER 1/8 x 1
TANK AND TIE RODS - PLATE 7			
7	1	29294	TANK TIE ROD
7	2	7789	TANK
7	3	8302	COVER AND SEAT SUPPORT
7	4		FLAT HEAD MACHINE SCREW 1/4 x 5/8 AND NUT
7	5	5487A	MANHOLE FRAME
7	6		CARRIAGE HEAD BOLT 3/8 x 1/4 AND NUT
7	7	8300A	OUTLET
7	8	7790	GASKET
7	9	8301	CLAMP
7	10		LOCK WASHER 3/8
7	11	2967	STRAINER

RIGID TRACTOR HITCH

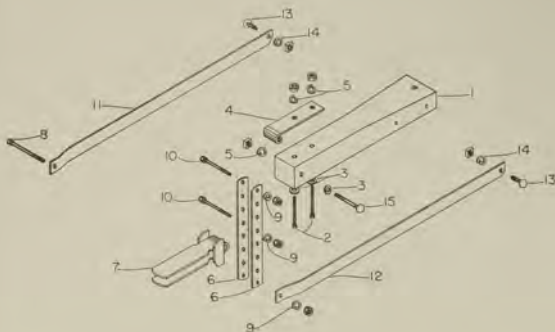


PLATE 8

PLATE	ITEM	PART NO.	DESCRIPTION
8	1	20 34 25	TONGUE
8	2		HEX HEAD BOLT 7/16 X 4 AND NUT
8	3		STANDARD WASHER 7/16
8	4	06 57 18	TRACTOR HITCH UPRIGHT BRACKET
8	5		LOCK WASHER 7/16
8	6	9820	TRACTOR HITCH UPRIGHT
8	7	45658	HITCH CLEVIS ASSEMBLY
8	8		HEX HEAD BOLT 1/2 X 4 AND NUT
8	9		LOCK WASHER 5/8
8	10		HEX HEAD BOLT 5/8 X 4 AND HEX NUT
8	11	06 70 95	R. H. TRACTOR HITCH BRACE
8	12	06 70 96	L. H. TRACTOR HITCH BRACE
8	13		CARRIAGE HEAD BOLT 1/2 X 1 1/2 AND NUT
8	14		LOCK WASHER 1/2
8	15		CARRIAGE HEAD BOLT 7/16 X 3 3/4 AND NUT

FIG. 12 PRESS WHEEL, FIG. 11 PRESS PLATE, FIG. 19 TRACTOR HITCH

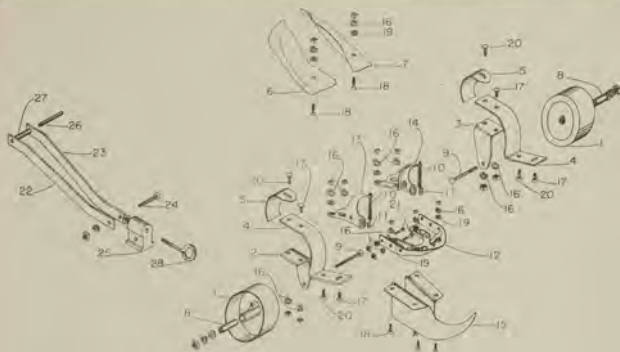


PLATE 9

PLATE	ITEM	PART NO.	DESCRIPTION
9	1	8305	PRESS WHEEL (ON COIL SPRING PRESS WHEEL ONLY)
9	2	2988R	R. H. BRACKET (ON COIL SPRING PRESS WHEEL ONLY)
9	3	2988L	L. H. BRACKET (ON COIL SPRING PRESS WHEEL ONLY)
9	4	2990B	PLATE (ON COIL SPRING PRESS WHEEL ONLY)
9	5	2988B	SCRAPER (ON COIL SPRING PRESS WHEEL ONLY)
9	6	2920	R. H. PRESS PLATE (ON COIL SPRING PRESS PLATE ONLY)
9	7	2920	L. H. PRESS PLATE (ON COIL SPRING PRESS PLATE ONLY)
9	8	7779	SPACER (PRESS WHEEL)
9	9		CARRIAGE HEAD BOLT 1/2 X 4 AND NUT (PRESS WHEEL)
			FOLLOWING PARTS SAME FOR COIL SPRING PRESS WHEEL AND PRESS PLATE
9	10	2911	COIL SPRING
9	11	2919	COIL SPRING HOOK BOLT
9	12	8100	PROW
9	13	8101	R. H. SPRING ARM
9	14	8102	L. H. SPRING ARM
9	15	2968	TOBACCO RUNNER (NOT SHOWN)
9	16	2970	7 INCH DEEP RUNNER
9	16		LOCK WASHER 3/8
9	17		CARRIAGE HEAD BOLT 3/8 X 1 1/8 AND NUT
9	18		ROUND C'SK HEAD BOLT 3/8 X 1 1/4 AND NUT
9	19		STANDARD WASHER 3/8
9	20		CARRIAGE HEAD BOLT 3/8 X 1 3/8 AND NUT
9	21		MACHINE BOLT 3/8 X 1 1/2 AND NUT
			FIG. 19 TRACTOR HITCH
9	22	7553H	R. H. DRAW IRON
9	23	7553L	L. H. DRAW IRON
9	24		CARRIAGE HEAD BOLT 5/8 X 3 1/4 AND NUT
9	25	8217	DRAW BLOCK
9	26	7554	INSIDE SPACER
9	27	7554 1/2	OUTSIDE SPACER
9	28	7555	DRAW BOLT

FIG. 13 LEAF SPRING PRESS PLATE

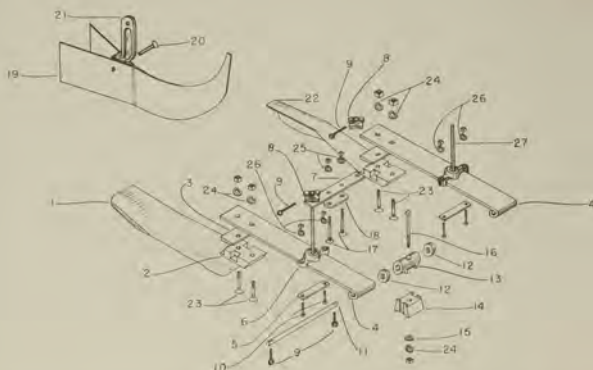


PLATE 10

PLATE	ITEM	PART NO.	DESCRIPTION
10	1	2994R	R. H. PRESS PLATE
10	2	B152	PRESS PLATE BOLT CLIP
10	3	B153	PRESS PLATE WEDGE
10	4	2997	FLAT SPRING
10	5	2999	YOKE
10	6	B151A	ADJUSTING CLAMP
10	7	2996	STAND FOR SCREW
10	8	B150	ADJUSTING HANDLE
10	9		COTTER 3/16 X 1 1/4
10	10		MACHINE BOLT 1/4 X 1 1/8 AND NUT
10	11	2990	HINGE PIN
10	12	B157	SPACER WASHER
10	13	B148	HOLDER
10	14	B170	SPACER
10	15		STANDARD WASHER 3/8
10	16		MACHINE BOLT 3/8 X 4
10	17		CARRIAGE HEAD BOLT 5/16 X 2 3/4 AND NUT
10	18	2996J	CLAMP PLATE
10	19	2993A	SHALLOW RUNNER WITH B 149
10	20		COUNTERSUNK HEAD RIVET 3/8 X 2
10	21	B149	RUNNER CENTER ARM
10	22	2994L	L. H. PRESS PLATE
10	23		FLAT HD. COUNTERSUNK BOLT 3/8 X 2 AND NUT
10	24		LOCK WASHER 3/8
10	25		LOCK WASHER 5/16
10	26		LOCK WASHER 1/4
10	27	2974A	ADJUSTING SCREW

FIG. 15 SINGLE CASTER WHEEL, FIG. 14 PIVOT WHEEL FRONT TRUCK

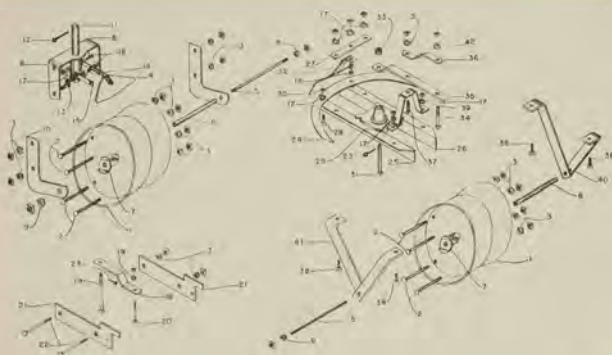


PLATE 11

PLATE	ITEM	PART NO.	DESCRIPTION
11	1	B165	HALF WHEEL ONLY
11	1	46 11 87	CASTER WHEEL ASSEMBLY (2-B165)
11	2		CARRIAGE HEAD BOLT 7/16 X 5
11	3		LOCK WASHER 7/16
11	4	7552	SCRAPER (FIG. 15)
11	5	2951	AXLE
11	6	2950	PIPE AXLE
11	7	B137	WASHER (CASTER WHEEL)
11	8	B166	WHEEL ARM BLOCK (FIG. 15)
11	9		LOCK WASHER 1/2
11	10	7550	WHEEL STANDARD (FIG. 15)
11	11	7549	PIVOT STUD (FIG. 15)
11	12		COTTER 5/16 X 2 1/4 (FIG. 15)
11	13		MACHINE BOLT 7/16 X 1 1/4 AND NUT
11	14	B157	ARM FOR WHEEL SCRAPER (FIG. 15)
11	15	7551	ADJUSTING LINK (FIG. 15)
11	16		MACHINE BOLT 3/8 X 1 AND NUT
11	17		LOCK WASHER 3/8
11	18	2945	HAMMER STRAP (FIG. 15)
11	19	425A	EVENER PIN (FIG. 15)
11	20		CARRIAGE HEAD BOLT 3/8 X 3 1/2 AND NUT
11	21	7545B	HOUND ASSEMBLY
11	22		CARRIAGE HEAD BOLT 7/16 X 5 1/4 AND NUT
11	23		COTTER 3/16 X 1 1/4
11	24	2942	CASTER WHEEL CIRCLE
11	25	2940H	H. M. CASTER WHEEL ANGLE (FIG. 14)
11	26	2940L	L. M. CASTER WHEEL ANGLE (FIG. 14)
11	27	2946	TIE PIECE
11	28		COUNTER SUNK ROUND HEAD BOLT 3/8 X 1 AND NUT
11	29	B136	PIVOT FOR FRONT WHEEL (FIG. 14)
11	30	2947	SCRAPER (FIG. 14)

FIG. 16 DOUBLE WHEEL FORE TRUCK

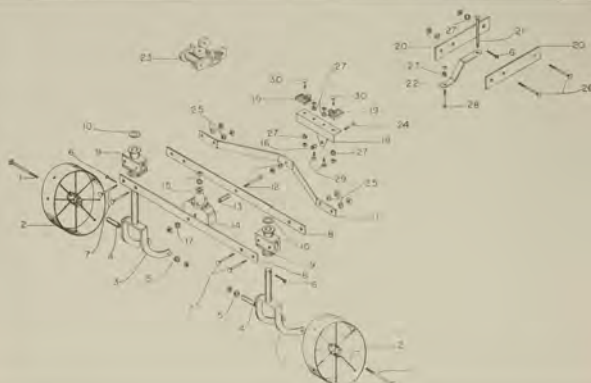


PLATE 12

PLATE	ITEM	PART NO.	DESCRIPTION
11	31	2949A	BOLT
11	32	2948	ARM
11	33		HEX CASTLE NUT 5/8
11	34		MACHINE BOLT 5/8 x 3 1/4 AND NUT
11	35	2943	EVENER BAR (FIG. 14)
11	36	2945	EVENER STRAP (FIG. 14)
11	37		MACHINE BOLT 7/16 x 1 3/4 AND NUT
11	38		CARRIAGE HEAD BOLT 3/8 x 1 1/4 AND NUT
11	39	2944	STAND
11	40	2941R	R. H. CASTER WHEEL STANDARD
11	41	2941L	L. H. CASTER WHEEL STANDARD
11	42		LOCK WASHER 5/8
			FIG. 16 DOUBLE WHEEL FORETRUCK
12	1		MACHINE BOLT 1/2 x 6 AND NUT
12	2	L1	STEEL WHEEL
12	3	816A	FRONT WHEEL YOKE WITH 823A STUD
12	4	835	BUSHING
12	5		LOCK WASHER 1/2
12	6		COTTER 1/4 x 1 3/4
12	7		CARRIAGE HEAD BOLT 7/16 x 4 AND NUT
12	8	7540	WHEEL CONNECTING STRAP
12	9	K58A	BEARING
12	10		PLAIN WASHER 1 1/8
12	11	7541	REAR BRACE
12	12		CARRIAGE HEAD BOLT 9/16 x 4 AND NUT
12	13	7542	PIVOT BUSHING
12	14	8215	PIVOT BLOCK
12	15		STANDARD WASHER 1 1/8
12	16	1030	BUSHING
12	17		LOCK WASHER 9/16
12	18	7570	CROSS BAR
12	19	8153	WEDGE

TONGUE, DOUBLE TREE, SINGLE TREE



PLATE 13

PLATE	ITEM	PART NO.	DESCRIPTION
12	20	7454A	POLE END IRON
12	21	425A	EVENER PIN
12	22	2945	EVENER STRAP
12	23	6107	SOCKET (ATT TO TRANSPLANTER MAIN FRAME)
12	24		CARRIAGE HEAD BOLT 3/8 X 2 AND NUT
12	25		LOCK WASHER 7/16
12	26		CARRIAGE HEAD BOLT 3/8 X 5 AND NUT
12	27		LOCK WASHER 3/8
12	28		CARRIAGE HEAD BOLT 3/8 X 3 1/2 AND NUT
12	29		CARRIAGE HEAD BOLT 3/8 X 1 1/4 AND NUT
12	30		CARRIAGE HEAD BOLT 3/8 X 1 1/2 AND NUT
			TONGUE, DOUBLE TREE, SINGLE TREE
13	1	2960A	TONGUE
13	1	9620	TONGUE ASSEMBLY
13	2	2965	DOUBLE TREE
13	2	9631	DOUBLE TREE ASSEMBLY
13	3	2966	SINGLE TREE
13	4	RD1180	L. H. SINGLE TREE HOOK
13	5	RD1179	R. H. SINGLE TREE HOOK
13	6	D6 23 24	EVENER STRAP
13	7	2956A	PLATE (TONGUE)
13	8		CARRIAGE HEAD BOLT 1/4 X 3 3/4 AND NUT
13	9		STANDARD WASHER 1/4
13	10		MACHINE BOLT 7/16 X 4 AND NUT
13	11		CARRIAGE HEAD BOLT 3/8 X 2 1/2 AND NUT
13	12		LOCK WASHER 3/8
13	13	P868	NECK YOKE
13	14	RD1175	DOUBLE EYE BOLT
13	15	RD1173	NECK YOKE STAPLE
13	16	RD1174	NECK YOKE RING
13	17	03 07 39	NECK YOKE CASTING (RD151)

WATER VALVE ASSEMBLY

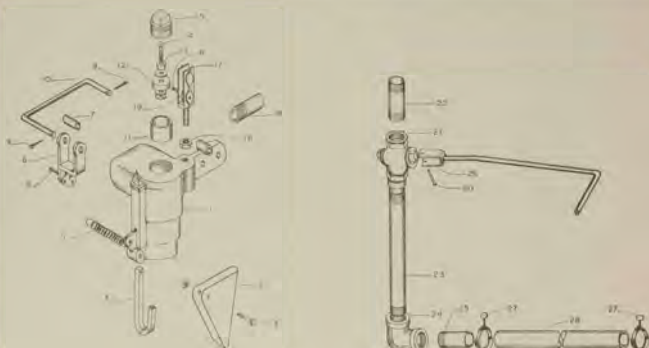


PLATE 14

PLATE	ITEM	PART NO.	DESCRIPTION
14	1	8134	WATER VALVE BODY
14	1	46 11 25	WATER VALVE COMPLETE
14	2	2916	SPOUT
14	3		MACHINE BOLT 1/4 X 1 1/4 AND NUT
14	4	2913	VALVE STEM
14	5	2912A	VALVE LIFTER SPRING
14	6	8135A	CONNECTING LINK
14	7	2973A	ROLLER
14	8		FLAT HEAD RIVET 3/16 X 1
14	9		COTTER 1/8 X 3/4
14	10	10544	WATER VALVE LINK
14	11	2976	VALVE SEAT
14	12	2917	WASHER
14	13	2918	WASHER
14	14		SO. HD. TAP BOLT 5/16 X 1 1/4
14	15		SO. HD. CUPPED PIPE PLUG 1 1/2
14	16		HEX LOCK NUT 1/2
14	17	8158A	VALVE ROD GUIDE
14	18	2915	NIPPLE
14	19	2979A	ROLLER FOR B. 158 A
14	20		RIVET 3/8 X 1
14	21		1 INCH STOP COCK, SO. END LESS HANDLE
14	22		NIPPLE 1 X 2 1/2 GALVANIZED
14	23	16 26 77	OUTLET PIPE
14	24		ELL 1 GALVANIZED
14	25		NIPPLE 1 X 3 GALVANIZED
14	26	10550	VALVE SHUT OFF LEVER ASSEMBLY
14	27		1 1/4 INCH CLAMP
14	28	2982	HOSE 1 1/4 X 28 1/4

INDEX STANDARD TRANSPLANTER PARTS

PART NO.	ITEM	PRICE	PAGE	PART NO.	ITEM	PRICE	PAGE
B100	PROW	6.10	13	B165	HALF WHEEL	14.10	15
B101	SPRING ARM	1.65	13	B166	BLUCK	10.15	15
B102	SPRING ARM	1.65	13	B167	ARM	1.05	15
B103	QUADRANT	2.35	5	B170	SPACER	.60	14
B104	SHIFTER FORK	1.10	7	B173A	PLATE	3.40	7
B105	ARM	.60	3	B174	PINTON, CLUTCH	1.60	7
B106	COUPLING	.80	3	B175	CLUTCH	.60	7
B107	PIVOT BLOCK	3.75	4	B176	TUBE HOLDER	8.65	9
B107	PIVOT BLOCK	3.75	16	B177A	R. H. HANGER	1.60	10
B110	GANG CLAMP	2.25	5	B178A	L. H. HANGER	1.60	10
D111	CIRCLE BRACKET	5.00	3	B197	VALVE LIFTER	1.00	8
B112	SPROCKET	2.00	5	B215	PIVOT BLOCK	3.45	18
B113A	CLAMP PLATE	.70	3	B217	DRAW BLOCK	1.75	13
B114	WHEEL SCRAPER	.60	3	B221A	L. H. TANK SUPPORT	2.95	3
B115	SCRAPER CAP	.25	3	B222A	R. H. TANK SUPPORT	2.95	5
B116	SEAT	3.40	3	B223A	DRIVE SPROCKET	2.40	5
B120	BRACKET - INSIDE	1.90	6	B226	ADJUSTER	2.80	10
B121	BRACKET - OUTSIDE	1.45	6	B300A	OUTLET	1.80	11
B122	TRIP ARM	3.55	6	B301	CLAMP	.85	11
B123	STUD ROLLER	.50	6	B302	SUPPORT	1.00	11
B124	WEDGE	.20	4	B305	PRESS WHEEL	5.85	13
B124	WEDGE	.20	6	B8W	BELT GUIDE	.35	9
B125	CLUTCH PLATE	.75	6	D9W	BELT GUIDE	.35	9
B126	CLUTCH	.60	6	D88W	SERRATED WASHER	.19	7
B127	SPACER	.25	4	E24	L. H. AGJ. FINGER	.70	7
B128	LEVER HANDLE	.50	6	E21W	R. H. AGJ. FINGER	.70	7
B129	GUIDE, REAR GANG	.50	3	K56A	BEARING	2.40	18
B130	WASHER	.40	5	K430	SERRATED HOLDER	.22	7
B131	WASHER	.40	6	L1	STEEL WHEEL	7.60	18
B131	AXLE COLLAR	.25	5	P85A	SPROCKET, 7 TOOTH	.50	9
B132	WASHER AND CAP	.40	5	P224	ROLLER	.45	7
B133	STUD WASHER	.09	3	P261	SPROCKET, 14 TOOTH	.95	7
B134	VALVE BODY	6.20	18	P350AL	DISC HUB	1.85	10
B135A	CONNECTING LINK	.60	18	P350AR	DISC HUB	1.65	10
B136	PIVOT	3.75	15	P352L	GREASE CUP	1.05	10
B137	WASHER	.25	15	P352R	GREASE CUP	1.05	10
B138A	SPROCKET, 5 POINT	.55	6	P353	WASHER	.19	10
B139A	SPROCKET, 6 POINT	.65	6	P404	AXLE, DISC HUB	2.65	10
B140A	SPROCKET, 7 POINT	.70	6	P427A	SPUR GEAR	2.40	7
B141A	SPROCKET, 8 POINT	.75	6	P428	LEVER RACK	.75	7
B142A	SPROCKET, 9 POINT	.80	6	P429	STOP	.65	7
B143A	SPROCKET, 10 POINT	.95	6	P430	LATCH ROLT	.19	7
B144A	SPROCKET, 11 POINT	1.10	6	P431	LEVER SOCKET	.75	7
B148	HOLDER	.50	14	P432	BEARING	.60	7
B149	RUNNER ARM	1.15	14	P496	ROLLER	.70	9
B150	ADJ. HANDLE	.95	14	P501A	BELT GUIDE	1.60	9
B151A	ADJ. CLAMP	.40	14	P502A	BELT GUIDE	1.60	9
B152	BOLT CLIP	.75	14	P504	BEARING	1.40	7
B153	WEDGE	.40	7	P505	SPROCKET, 24 TOOTH	2.55	7
B153	WEDGE	.40	14	P512	BELT ROLLER	2.90	9
B153	WEDGE	.40	16	P868	NECK YOKE	4.50	17
B154	DISC HUB	1.15	3	RD1173	YOKE STAPLE	.30	17
B155	SPINDLE	.60	4	RD1174	YOKE RING	.55	17
B156	ROLLER	.40	6	RD1175	DOUBLE EYE BOLT	.85	17
B157	SPACER WASHER	.09	14	RD1179	TREE HOOK	.65	17
B158A	GUIDE	1.80	18	RD1180	TREE HOOK	.65	17

INDEX STANDARD TRANSPLANTER PARTS

PART NO.	ITEM	PRICE	PAGE	PART NO.	ITEM	PRICE	PAGE
2487A	MANHOLE FRAME	2.30	11	2929A	TANK ROD	.80	11
2519A	BEARING	.65	7	2930	NOTCHED CLIP	.35	6
2554S	WHEEL HUB	2.90	5	2931A	LOCK LEVER	.60	3
T95W	BELT GUIDE	.22	9	2932	SPRING	.12	4
425A	EVENER PIN	.60	15	2935	SPRING	.21	4
816A	YOKE	2.45	16	2936	HOLEVER	.25	3
835	BUSHING	.24	16	2937A	HOGG	.25	4
1030	BUSHING	.25	16	2938	FOOT REST	.60	4
2689	BELT SHIELD	.12	9	2939	BRACKET	.20	4
2761	FELT WASHER	.10	10	2940L	WHEEL ANGLE	.85	15
2800	PAWL GUIDE	.45	5	2940H	WHEEL ANGLE	.80	15
2809B	STAY IRON	.60	7	2941L	WHEEL STANDARD	.85	15
2870	HINGE	.24	7	2941P	WHEEL STANDARD	.80	15
2880L	FRAME ANGLE	5.75	3	2942	WHEEL CIRCLE	1.60	15
2880R	FRAME ANGLE	5.75	3	2943	EVENER BAR	.95	15
2881X	FRONT TIE PIECE		4	2944	STAND	.45	15
2882AL	TANK REST	1.40	3	2945	STRAP	.40	15
2882AR	TANK REST	1.40	3	2946	TIE PIECE	.25	15
2883	SCRAPER PIPE	5.00	3	2947	SCRAPER	.60	15
2884	AXLE	7.05	5	2948	ARM	.30	15
2885	AXLE SUPPORT	2.75	5	2949A	BOLT	.35	15
2886	GANG ADJ. BAR	1.05	4	2950	PIPE AXLE	.35	15
2887	DRAG BAR - REAR	1.55	3	2951	AXLE	.35	15
2888	ADJUSTING BAR	.65	4	2956A	PLATE TONGUE	.20	17
2891	PAWL	.50	3	2957	DISC ASSEMBLY	3.45	4
2892A	PULL ROD	.20	5	2958	SUPPORT	1.10	4
2893	SPRING	.19	5	2959	CLIP	.40	4
2894	PRESSURE SPRING	1.05	5	2960A	TONGUE	6.00	17
2895	PRESSURE SPRING BAR	.55	5	2961	MARKER POLE	1.35	4
2896	VALVE ROD	.70	6	2965	DOUBLE TREE	13.75	17
2897	PULL ROD	.45	6	2866	SINGLE TREE	3.00	17
2898A	TRIP SPRING	.40	6	2867	STRAINER	1.05	11
2899	S-HOOK	.15	6	2868	TOBACCO RUNNER	6.25	13
2901	SPRING	.26	6	2870	RUNNER	7.80	13
2902	TRIP SHAFT	1.60	6	2973A	ROLLER	.19	18
2904	SPRING	.21	6	2974A	ADJ. SCREW	.95	14
2905	HOGG BOLT	.19	6	2976	VALVE SEAT	.60	18
2906	STUD-ROLLER	.75	6	2979A	ROLLER FOR B156A	.45	18
2907	PIN-TRIP ARM	.19	6	2982	HOSE	2.30	18
2908	ARM	.50	8	2985	WHEEL	14.90	5
2909	U-BOLT	.35	5	2988H	SCRAPER	.60	13
2910	SEAT REST	.25	3	2988L	BRACKET	1.30	13
2911	COIL SPRING	.50	13	2988P	BRACKET	1.30	13
2912A	SPRING	.14	18	2990S	PLATE	.75	13
2913	VALVE STEM	1.70	18	2993A	RUNNER	6.05	14
2915	NIPPLE	.24	18	2994L	PRESS PLATE	2.85	14
2916	SPOUT	.60	18	2994H	PRESS PLATE	2.85	14
2917	HOGG BOLT	.12	13	2996	STAND	.60	1A
2918	WASHER	.07	18	2996L	CLAMP PLATE	.09	14
2919	HOGG BOLT	.40	13	2997	FLAT SPRING	1.15	14
2920	PRESS PLATE	2.40	13	2998	HINGE PIN	.50	14
2923	FOOT REST	.50	4	2999	YOKE	.11	14
2924	YOKE	.15	4	4533	BELT SHAFT	.50	9
2925A	REST SUPPORT	.65	3	4565B	HITCH CLEVIS	3.55	12
2927	POLE SUPPORT	.95	3	4595	CH. TIGHTENER	.48	7
2928	CLIP	.19	4	4599	GATE CRANK	.55	7

INDEX STANDARD TRANSPLANTER PARTS

PART NO.	ITEM	PRICE	PAGE	PART NO.	ITEM	PRICE	PAGE
4600	LINK FOR 4599	.55	7	7594A	BELT SHAFT	2.55	9
4601	LEVER	.70	7	7596	CLUTCH SHIFTER	.85	10
4602	BOTTOM SHIELD	.50	9	7601	SPRING CLEVIS	.95	10
4604A	BELT SHIELD	.22	9	7602	SPRING	.24	10
4606	HINGE ROD	.05	7	7608	LOCK LEVER	.35	10
4607A	SPRING	.09	7	7615	BRACE	.40	7
4608	GATE SHIELD	.50	7	7616	CONNECTING LINK	.35	7
4610A	GATE GUIDE	.55	7	7617	ANGLE BRACE	1.90	10
4611A	GATE GUIDE	.55	7	7618	ANGLE BRACE	1.90	10
4801	AGL. SHAFT	2.25	7	7670	CONCAVE DISC	1.75	10
4802	BEARING	.45	7	7671	HOLDER	2.30	10
4803	WOOD BEARING	.19	7	7674	ADJ. LEVER	1.10	10
4808	AGL. DRIVE CHAIN	1.35	9	7675	BRACE	.55	10
5259	FERT. TUBE	1.80	9	7677A	TUBE GUIDE	1.75	10
7454A	END IRON	1.40	16	7678A	TUBE GUIDE	1.75	10
7484	FOOT LEVER	1.00	10	7779	SPACER	1.70	13
7486	CATCH HOOK	.25	10	7789	TANK	13.30	11
7487	HOLDER	.35	10	7790	GASKET	.35	11
7540	CONN. STRAP	1.25	16	9601	LEVER ASSEMBLY	7.85	5
7541	REAR BRACE	1.50	16	9620	TONGUE ASSEMBLY	7.00	17
7542	BUSHING	.35	16	9631	DOUBLE TREE	3.20	17
7545B	HOUND ASSEMBLY	4.00	15	9644	HINGE ASSEMBLY	.40	5
7549	PIVOT STUD	1.60	15	9820	UPRIGHT	.60	12
7550	WHEEL STANDARD	.90	15	10544	VALVE LINK	.95	18
7551	ADJUSTING LINK	.19	15	10550	SHUT OFF LEVER	.65	18
7552	SCRAPER	.95	15	030739	YOKE CASTING	.25	17
7553L	DRAW IRON	1.25	13	062324	EVENER STRAP	.16	17
7553R	DRAW IRON	1.25	13	065718	UPRIGHT BRACKET	.65	12
7554	INSIDE SPACER	.20	13	067095	HITCH BRACE	1.50	12
7554½	OUTSIDE SPACER	.25	13	087096	HITCH BRACE	1.50	12
7555	DRAW BOLT	.65	13	079102	ALEMITE	.06	9
7561	BUSHING	.10	4	079102	ALEMITE	.06	10
7563	LEVER - L. SIDE	.75	3	162677	OUTLET PIPE	1.00	18
7570	CROSS BAR	.60	16	203425	TONGUE	2.20	12
7574	BACK REST	.75	3	423519	FERT. GATE	2.90	7
7582	WOOD HOPPER	12.50	7	461125	WATER VALVE	16.50	18
7585	SHIELD - BELT	1.75	9	461174	LEG REST	2.05	3
7586	FRONT COVER	1.10	7	461175	PRESSURE LEVER	4.00	5
7588	FERT. SUPPORT	2.35	7	461187	CASTER WHEEL	28.50	15
7589	PLATE	1.30	7	461191	SUPPORT ARM	3.30	10
7590	BEARING PLATE	.60	7	461192	SUPPORT ARM	3.30	10
7591	SUPPORT FOR 7590	1.60	7	461194	FERT. BELT (2686)	8.85	9
7592	TIGHTENER ARM	.80	7		1" STOP COCK FOR TANK		18
7593	DRIVE SHAFT	1.75	7		1½ HOSE CLAMP		18



FARM MACHINERY

Weed Sprayers
Mist Sprayers
Orchard and Row Crop Sprayers
Potato Planters
Corn Planters
Transplanters
Vegetable Planters
Potato Diggers
Manure Spreaders
Peanut Pickers
Orchard and Row Crop Dusters
Hi-Clearance Sprayers and Dusters

A. B. FARQUHAR COMPANY

YORK, PENNSYLVANIA

Division of

THE OLIVER CORPORATION